Technical Documentation

Troubleshooting

Version 26.3.1 : latest, 14 October 2026

Table of Contents

1. Troubleshooting Guide Overview . . . 2
   1.1. Scope . . . 2
   1.2. Troubleshooting Approach . . . 2
   1.3. Supported Platforms . . . 2
2. System Health . . . 3
   2.1. Container . . . 3
      2.1.1. Checking Container Status . . . 3
      2.1.2. Recovering from a Container Failure . . . 3
   2.2. Brick Daemons . . . 3
      2.2.1. Display the Process Status . . . 4
      2.2.2. Core Dump . . . 6
      2.2.3. Recovering from a BD Failure . . . 6
   2.3. Running Configuration . . . 7
      2.3.1. Verifying the Configuration . . . 7
      2.3.2. Restoring a Configuration . . . 7
   2.4. License . . . 8
      2.4.1. Verifying a License . . . 9
      2.4.2. Restoring or Updating a License . . . 9
   2.5. Control Daemon . . . 9
   2.6. System Utilization . . . 10
      2.6.1. Memory and CPU Verification . . . 10
      2.6.2. Disk Space . . . 17
      2.6.3. PCAP File Storage Location . . . 19
3. Physical Layer . . . 21
   3.1. Link Failures . . . 21
   3.2. Hardware Failures . . . 23
4. Application Layer . . . 25
   4.1. Fabric Operation . . . 25
      4.1.1. Fabric Protocols . . . 25
      4.1.2. Transport-layer Routing . . . 26
      4.1.3. Fabric Connectivity . . . 27
   4.2. Subscriber Services . . . 28
      4.2.1. Subscriber Sessions . . . 28
      4.2.2. RADIUS . . . 30
      4.2.3. PPPoE Sessions . . . 32
      4.2.4. L2TP Sessions . . . 34
      4.2.5. Service-Layer Connectivity . . . 34
   4.3. Host Path Capturing . . . 36

4.3.1. Physical Interface . . . 36
4.3.2. Logical Interface . . . 36
4.3.3. Shared Memory Interface . . . 36
4.3.4. ACL-based Packet Capturing . . . 37
4.3.5. Filtering by Protocol . . . 38
4.3.6. Raw Format . . . 38
4.3.7. PCAP File . . . 39
5. Logging . . . 40
5.1. Log Files . . . 40
5.1.1. Log Files on the Host OS . . . 40
5.1.2. Log Files in the LXC . . . 40
5.2. BDS Logging . . . 41
5.2.1. Enabling BDS Logging . . . 41
5.2.2. Inspecting Log Tables . . . 42
6. Reporting Issues to RtBrick . . . 44
6.1. Opening a case . . . 44
6.1.1. Support Portal . . . 44
6.2. Debugger Information Utility Program . . . 47
6.2.1. How to Retrieve Data Using the Utility Program . . . 48
6.2.2. Periodic Data Collection . . . 49
6.2.3. Viewing Debug File Generation Status . . . 49

Troubleshooting Guide provides a systematic approach to diagnosing and resolving issues in RBFS deployments. From validating system health and physical connectivity to troubleshooting services, analyzing logs, capturing traffic, and preparing support data, this guide equips you with the tools and workflows needed to identify root causes and restore services.

The following guide is available under the Troubleshooting section:

- Troubleshooting

1. Troubleshooting Guide Overview

1.1. Scope

This troubleshooting guide outlines how to troubleshoot devices running RBFS. It is intended for Network Operations teams typically performing monitoring, 1st or 2nd level support in a production environment. This guide helps the operator to identify if it is an RBFS issue, and to narrow down the device and the process or application that causes the issue. Troubleshooting for network engineering, or in-depth analysis of BDS tables is out-of-scope of this guide. It is assumed that the user of this guide is familiar with the basics of RBFS, as well as the basics of using a Linux-based network operating system. This guide will be continuously extended to cover failure scenarios which have occurred in production environments.

1.2. Troubleshooting Approach

There is no strict order in which various troubleshooting steps must be performed. The best approach will always depend on the nature of the problem observed. Generally speaking it is recommended to first perform some basic system health checks as described in the System Health section. Next, it's a general best network troubleshooting practice to verify the OSI layers from bottom to top. Applying this best practice to an RBFS fabric, it is recommended to first verify the physical layer as described in the Physical Layer section, then verify the operation of the fabric as described in the Fabric Operation section, and finally verify services that run on top of the fabric as described in the Application Layer section. Fabric and services protocol operation can be verified using the built-in RBFS capture tool explained in Host Path Capturing section. Section 5 describes RBFS logging capabilities that apply to all layers. Finally, the Logging section provides guidance when and how to report an issue to RtBrick. If you already know or have an indication what seems to be the trouble, you can of course directly proceed to that area and skip all prior steps proposed in this guide.

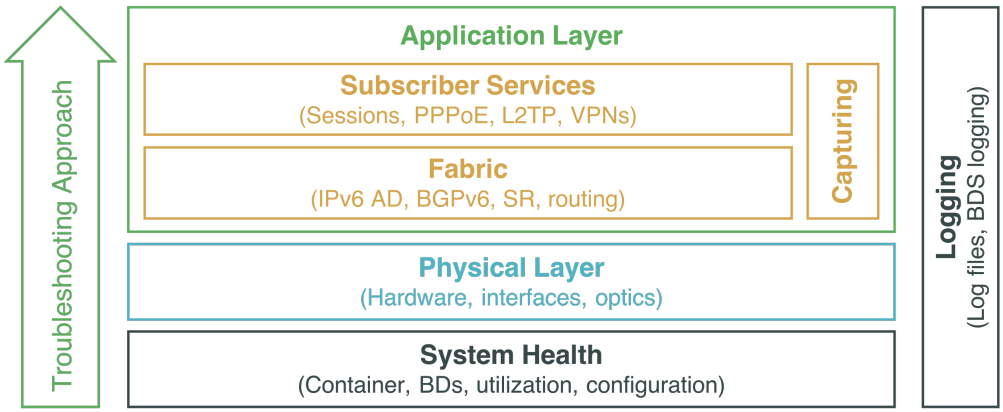

1.3. Supported Platforms

Not all features are necessarily supported on each hardware platform. Refer to the *Platform Guide* for the features and the sub-features that are or are not supported by each platform.

2. System Health

2.1. Container

The steps described in this section are performed on the host OS. For logging into the host OS instead of into the Linux container, use SSH port 1022 instead of the default port 22. Example:

```
ssh supervisor@10.10.0.100 -p 1022
```

2.1.1. Checking Container Status

The RBFS services run in a Linux container (LXC). If you are able to log in into the container, obviously the container is running. If you are not able to log in, you can verify the status of the container on the host OS, i.e. RtBrick Host on hardware switches, as follows:

```
supervisor@spine1:~$ sudo lxc-ls -f
NAME    STATE   AUTOSTART GROUPS IPV4      IPV6
rtbrick RUNNING 1         -      10.0.3.10 -
```

Show output using the 'show bd running-status' command On a hardware switch, there will be a single container called "rtbrick" and the state shall be "Running". If the state is "Stopped" or "Failed", the container has failed and the system is in a non-operational state.

2.1.2. Recovering from a Container Failure

If the container exists but is not running, you can start it using the rtb-image tool:

```
supervisor@spine1:~$ sudo rtb-image container start rtbrick
```

Alternatively you can use the following lxc command:

```
supervisor@spine1:~$ sudo lxc-start -n rtbrick
```

If the container does not exist, or if starting it fail, you can try to recover by restarting the device at the RtBrick Host layer:

```
supervisor@spine1:~$ sudo reboot
```

2.2. Brick Daemons

2.2.1. Display the Process Status

You can check the running status of a brick daemon using the "show process status" command. The "show process usage summary" command provides information about the process usage status of a running brick daemon.

```
supervisor@rtbrick.net: cfg> show process status
Name                Status                     Uptime               Start Time
Auto Restart Count
bgp.appd.1          running         0y 0d 12h 14m 09s     Jul 24 2025 02:21:35
0
bgp.iod.1           running         0y 0d 12h 14m 08s     Jul 24 2025 02:21:36
0
confd               running         0y 0d 12h 17m 28s     Jul 24 2025 02:18:16
0
etcd                running         0y 0d 12h 17m 28s     Jul 24 2025 02:18:16
0
fibd                running         0y 0d 12h 17m 13s     Jul 24 2025 02:18:31
0
hostconfd           running         0y 0d 12h 17m 28s     Jul 24 2025 02:18:16
0
ifmd                running         0y 0d 12h 17m 12s     Jul 24 2025 02:18:32
0
lldpd               running         0y 0d 12h 17m 11s     Jul 24 2025 02:18:32
0
mribd               running         0y 0d 12h 17m 11s     Jul 24 2025 02:18:33
0
oamd                running         0y 0d 12h 17m 28s     Jul 24 2025 02:18:16
0
opsd                running         0y 0d 12h 17m 29s     Jul 24 2025 02:18:16
0
policy.server       running         0y 0d 12h 14m 07s     Jul 24 2025 02:21:37
0
poold               running         0y 0d 12h 17m 28s     Jul 24 2025 02:18:16
0
resmond             running         0y 0d 12h 17m 28s     Jul 24 2025 02:18:16
0
resmond-agent       running         0y 0d 12h 17m 28s     Jul 24 2025 02:18:16
0
restconfd           running         0y 0d 12h 17m 28s     Jul 24 2025 02:18:16
0
ribd                running         0y 0d 12h 17m 10s     Jul 24 2025 02:18:34
0
staticd             running         0y 0d 12h 17m 09s     Jul 24 2025 02:18:35
0
```

```
supervisor@rtbrick.net: cfg> show process usage summary
Name                    PID    Virtual Memory   Resident Memory     Shared Memory
CPU %     Mem %  CPU Core
```

```
bgp.appd.1              1265         88.33 MiB         41.99 MiB         16.34 MiB
0.00      0.26  0-7
bgp.iod.1               1274        185.48 MiB         45.99 MiB         16.34 MiB
0.00      0.29  0-7
confd                    195        106.61 MiB         81.95 MiB         21.05 MiB
0.81      0.51  0-7
etcd                     176         52.82 MiB         38.40 MiB         14.19 MiB
0.00      0.24  0-7
fibd                     363         11.87 GiB          1.20 GiB         93.56 MiB
61.52      7.67  0-7
ifmd                     376        203.00 MiB         49.84 MiB         14.81 MiB
0.20      0.31  0-7
lldpd                    387         53.02 MiB         37.12 MiB         14.77 MiB
0.00      0.23  0-7
mribd                    396         85.36 MiB         40.04 MiB         14.93 MiB
0.20      0.25  0-7
oamd                     182        309.40 MiB         48.83 MiB         14.41 MiB
0.20      0.31  0-7
policy.server           1285         52.89 MiB         37.03 MiB         14.72 MiB
0.00      0.23  0-7
poold                    186         50.95 MiB         36.40 MiB         14.20 MiB
0.00      0.23  0-7
resmond                  201        123.82 MiB         37.97 MiB         14.51 MiB
0.20      0.24  0-7
ribd                     407        128.52 MiB         51.26 MiB         15.02 MiB
0.00      0.32  0-7
staticd                  418         83.95 MiB         40.02 MiB         14.59 MiB
0.00      0.25  0-7
```

RBFS runs multiple Brick Daemons (BD). You can verify the status of the daemons using the Debian system control (systemctl) or using the RBFS show command: 'show bd running-status'. The following commands will show all rtbrick services. The status should be "running":

Example 1: Show output using the Debian system control command

```
supervisor@rtbrick:~$ sudo systemctl list-units | grep rtbrick
var-rtbrick-auth.mount                    loaded active     mounted   /var/rtbrick/auth
rtbrick-alertmanager.service              loaded active     running   rtbrick-alertmanager service
rtbrick-bgp.appd.1.service                loaded active     running   rtbrick-bgp.appd.1 service
rtbrick-bgp.iod.1.service                 loaded active     running   rtbrick-bgp.iod.1 service
<...>
```

The supported BDs differ by role and may change in a future release. You can display further details as shown in the following example:

```
supervisor@rtbrick:~$ sudo systemctl status rtbrick-fibd.service

 rtbrick-fibd.service - rtbrick-fibd service
   Loaded: loaded (/lib/systemd/system/rtbrick-fibd.service; enabled; vendor preset: enabled)
   Active: active (running) since Mon 2020-10-19 05:01:16 UTC; 4h 41min ago
```

```
  Process: 248 ExecStartPost=/bin/bash -c [ -f "/usr/local/bin/rtbrick-ems-service-event" ] && { /usr/bin/python3
/usr/local/bin/rtbr
  Process: 240 ExecStartPre=/bin/mkdir -p /var/run/rtbrick/fibd_pipe (code=exited, status=0/SUCCESS)
  Process: 225 ExecStartPre=/usr/local/bin/rtbrick-bcm-sdk-symlink.bash (code=exited, status=0/SUCCESS)
  Process: 150 ExecStartPre=/usr/local/bin/rtbrick-vpp-startup-conf.bash (code=exited, status=0/SUCCESS)
 Main PID: 246 (vpp_main)
   CGroup: /system.slice/rtbrick-fibd.service
           246 /usr/local/bin/bd -i /etc/rtbrick/bd/config/fibd.json
```

If the status is "failed", the respective service or daemon has failed. A daemon failure is a major issue, and depending on which BD has failed, the system is likely to be in a non-operational state. If a BD has failed, inspect the system log (syslog) file as well as the respective BD log file as described in the Logging section, then proceed to sections Verifying the Configuration and Restoring a Configuration, and finally report the failure to RtBrick as described in the Reporting Issues to RtBrick section.

2.2.2. Core Dump

If a BD fails, it shall create a core dump file. A core dump is a file containing a process's state like its address space (memory) when the process terminates unexpectedly. These files are located in /var/crash/rtbrick. If you have identified or suspect a BD failure, navigate to this directory and check for core dump files:

```
supervisor@rtbrick:~$ cd /var/crash/rtbrick/
supervisor@rtbrick:/var/crash/rtbrick$ ls -l
-rw-r--r-- 1 root root 3236888576 Apr  9 10:17 core.fibd_136_2020-04-09_10-16-52
```

If there is a core dump file, you can decode it using the GNU debugger tool like in the following example:

```
supervisor@rtbrick:/var/crash/rtbrick$ sudo gdb bd core.fibd_136_2020-04-09_10-16-52
<...>
```

At the resulting 'gdb' prompt, type and enter 'bt' for backtrace:

```
(gdb) bt
<...>
```

Report the resulting output to RtBrick as described in the Reporting Issues to RtBrick section. Analysing the core dump file will typically require support from RtBrick and is beyond the scope of this guide.

2.2.3. Recovering from a BD Failure

When a brick daemon (except FIBD) goes down, RBFS automatically restarts it up to three times within a 420-second window. After the seven-minute window, the daemon (except FIBD) can also be restarted with the "sudo systemctl restart <daemon>" or "sudo service <daemon> restart"

command. The FIBD daemon is restarted up to three times within a 2678400-second window; after this, the device must be restarted manually to bring up the FIBD daemon. This functionality has been tested under multidimensional scale scenarios.

If the automatic restart does not succeed, you can use the Debian 12 system control to start a daemon like in the following example:

```
supervisor@rtbrick:~$ sudo systemctl start rtbrick-fibd.service
```

Alternatively you can recover from a BD failure by rebooting the container from the Linux container shell:

```
supervisor@rtbrick:~$ sudo reboot
```

2.3. Running Configuration

2.3.1. Verifying the Configuration

A missing running configuration is another possible problem scenario. There are several reasons why the system might be missing its configuration. Posting the running configuration might have failed for example due an invalid configuration syntax, or there was a connectivity issue between the device and the provisioning system.

You can easily verify via CLI if there is a running configuration:

```
supervisor@rtbrick: op> show config
```

If you suspect a configuration load issue, inspect the confd logs as well as the CtrlD log as describe in the Logging section.

2.3.2. Restoring a Configuration

It depends on the customer deployment scenario how a running configuration shall be applied or restored in case of an issue.

If the device already had a configuration previously, and you have saved it in a file, you can simply load it via the CLI:

```
supervisor@rtbrick: cfg> load config spine1-2020-10-19.json
```

If the device already had a configuration previously, and has been configured to load the last configuration with the 'load-last-config: true' attribute, you can restore it by rebooting the container at the Linux container shell:

```
supervisor@rtbrick:~$ sudo reboot
```

Otherwise you can also copy an automatically stored running configuration file into your user directory and load it manually like in the following example:

```
supervisor@leaf1:~$ sudo cp /var/rtbrick/commit_rollback/766e102957bf99ec79100c2acfa9dbb9/config/running_config.json
running_config.json

supervisor@leaf1:~$ ls -l
total 12
-rw-r--r-- 1 root root 8398 Oct 21 09:45 running_config.json

supervisor@leaf1:~$ cli
supervisor@leaf1: op> switch-mode config
Activating syntax mode : cfg [config]
supervisor@leaf1: cfg> load config running_config.json
supervisor@leaf1: cfg> commit
```

If it’s a newly deployed or upgraded device, and there is out-of-band connectivity from your network management system, you can trigger the configuration from your NMS.

If it’s a newly deployed or upgraded device, and the configuration shall be applied via a ZTP process from a local ZTP server, you need to reboot the device at the RtBrick Host layer in order to trigger the ZTP process:

```
supervisor@spine1:~$ sudo reboot
```

There is also an option to manually copy a configuration file to the device and into the container. If you have copied a configuration file via an out-of-band path to the RtBrick Host layer of the device, you can copy it into the container as follows. Please note the name in the directory path needs to match the name of the container, like "spine" in this example:

```
supervisor@spine1:~$ cp spine1-2020-10-19.json /var/lib/lxc/spine1/rootfs/home/supervisor/
```

Next you can load this configuration via the CLI as already described above:

```
supervisor@rtbrick: cfg> load config spine1-2020-10-19.json
```

2.4. License

RBFS software requires a license to ensure its legitimate use. The license will be automatically validated and enforced. After an initial grace period of 7 days, if a license is missing or expired, RBFS will be restricted. The CLI as well as the BDS APIs will not work anymore.

If all CLI commands do not work, the license might be missing or expired.

2.4.1. Verifying a License

You can verify the license via the CLI:

```
supervisor@rtbrick: op> show system license
License Validity:
  License index 1:
    Start date : Fri Mar 12 06:43:25 GMT +0000 2021
    End date   : Sat Mar 12 06:43:25 GMT +0000 2022
```

The output will indicate if there is a valid license, no license, or if the license is expired.

2.4.2. Restoring or Updating a License

The license is installed by configuration. If the license is missing but the device already had a license configuration previously, please restore the configuration as described in the Restoring a Configuration section above.

If the license is expired, please configure a new valid license key. If you do not have a license key yet, please contact your RtBrick support or sales representative to obtain a license.

2.5. Control Daemon

In addition to the Brick Daemons running inside the LXC container, there are some RBFS services running on the host OS. The most important one is CtrlD (Control Daemon). CtrlD acts as the single entry point to the system. Verify the status of CtrlD:

```
supervisor@spine1:~$ sudo service rtbrick-ctrld status
[....] Checking the rtbrick ctrld service:3751
. ok
```

If the status is not "ok", restart, start, or stop and start CtrlD:

```
supervisor@spine1:~$ sudo service rtbrick-ctrld restart

supervisor@spine1:~$ sudo service rtbrick-ctrld stop
supervisor@spine1:~$ sudo service rtbrick-ctrld start
```

If the status is "ok", but you suspect an issue related to CtrlD, inspect the ctrld logs as also described in section 5:

```
supervisor@spine1:/var/log$ more rtbrick-ctrld.log
```

2.6. System Utilization

There are cases when system-related information has to be checked: symptoms like sluggish response, or daemons/processes crashing repeatedly can mean that system resources are overutilized. In such cases first steps are to verify CPU, memory, and disk. Before, it is good to remember the general architecture of an RtBrick switch: we have the physical box, on which RtBrick Host sits. In RtBrick Host we run the LXC container (which has Debian 12 Bookworm installed), which in turn has RBFS running inside it.

In the following sections we'll mainly concentrate on the LXC container verifications, and will specify where the commands are executed in RtBrick Host. The order in which the commands are shown in this section can also be used to do the basic system troubleshooting.

2.6.1. Memory and CPU Verification

When suspecting the memory is overutilized, a quick way to verify that use `free`: this command provides information about unused and used memory and swap space. By providing the `-h` (human readable) flag, we can quickly see the memory availability of the system:

```
supervisor@rtbrick:~$ free -h
              total        used        free      shared  buff/cache   available
Mem:            31G        4.3G         24G        469M        2.3G         26G
Swap:            0B          0B          0B
```

The output from `free` is based on what the system reads from `/proc/meminfo`; of importance are the `available` and `used` columns. The description of the fields can be seen below (since `man` is not available on the switches):

`free` *command fields description*

Name	Description
total	Total amount of memory that can be used by the applications.
used	Used memory, which is calculated as `total` - `free` - `buffers` - `cache`
free	Unused memory.
shared	Backwards compatibility, not used.
buff/cache	The combined memory used by the kernel buffers and page cache. This memory can be reclaimed at any time if needed by the applications.
available	Estimate of the amount of memory that is available for starting new applications. Does not account swap memory.

`free` has a few useful options that can be used:

- `-h` - human readable: makes the output easier to read, by using the common shortcuts for units (e.g M for mebibytes, G fo gibibytes etc)
- `-t` - total: will display a total at the bottom of each column (basically adding physical+swap

memory)

- `-s` - continuous print output (can be interrupted with Ctrl+C): by giving a `seconds` value at which the output is refreshed, you will get a continuous display of values (similar to the `watch` command; e.g `free -s 5`)

As it can be seen, `free` is a basic utility that displays relevant information in a compressed format. It does not offer detailed or real-time information about the running processes. As with the CPU, we can use `top` to obtain realtime information about memory usage

Another way to check memory consumption, as well as CPU utlization, is to use `top`; it is one of the most common ways to start troubleshooting a Linux-based system, because it provides a wealth of information, and, in general, is a good starting point for system troubleshooting.

Basically, this command allows users to monitor processes and CPU/memory usage, but, unlike many other commands, it does so in an interactive way. `top` output can be customized in many ways, depending on the information we want to focus on, but in this guide we will not go through all the possible options `top` has.

A typical `top` output looks like the one below:

```
supervisor@rtbrick:~$ top

top - 21:12:41 up 1 day,  8:13,  1 users,  load average: 2.66, 2.72, 2.73
Tasks:  46 total,   1 running,  45 sleeping,   0 stopped,   0 zombie
%Cpu(s): 12.4 us,  8.5 sy,  0.0 ni, 79.0 id,  0.0 wa,  0.0 hi,  0.1 si,  0.0 st
KiB Mem : 32785636 total, 26181044 free,  4135516 used,  2469076 buff/cache
KiB Swap:        0 total,        0 free,        0 used. 27834804 avail Mem

  PID USER      PR  NI    VIRT    RES    SHR S  %CPU %MEM     TIME+ COMMAND
  260 root      20   0 10.563g 1.473g 177440 S 109.3  4.7   2280:59 vpp_main
  108 root      20   0  406552 121648  46196 S  31.9  0.4  36:49.48 pppoed.1
  168 root      20   0 3203196  40704   9824 S   7.0  0.1 117:40.63 rtbrick-resmond
  156 root      20   0  461888 134852  59328 S   2.3  0.4  38:11.79 subscriberd.1
  112 root      20   0  438592 140644  46892 S   2.0  0.4  36:35.40 igmp.iod.1
  166 root      20   0  408076 117936  43416 S   2.0  0.4  36:35.14 pim.iod.1
  176 root      20   0  392036 114596  40312 S   2.0  0.3  37:15.43 l2tpd.1
  183 root      20   0  586944 144644  51256 S   1.7  0.4  38:27.94 bgp.iod.1
  136 root      20   0  425212 147080  35636 S   1.3  0.4  22:50.32 resmond
  193 root      20   0 1453416 929168  93672 S   0.7  2.8  17:09.07 confd
  266 root      20   0  836892 107804  35424 S   0.7  0.3  17:59.60 prometheus
  <...output omitted...>
```

`top` output is divided in two different sections: the upper half (summary area) of the output contains statistics on processes and resource usage, while the lower half contains a list of the currently running processes. You can use the arrow keys and Page Up/Down keys to browse through the list. If you want to quit, press “q” or Ctrl+C.

On the first line, you will notice the system time and the uptime, followed by the number of users logged into the system. The first row concludes with `load average` over one, five and 15 minutes.

“Load” means the amount of computational work a system performs. In our case, the load is the number of processes in the R (runnable) and D (uninterruptible sleep) states at any given moment.

> *A word on process states*
>
> We’ve mentioned above about a "process state". In Linux, a process may be in of these states:
>
> - Runnable (R): The process is either executing on the CPU, or it is present in the run queue, ready to be executed.
> - Interruptible sleep (S): The process is waiting for an event to complete.
> - Uninterruptible sleep (D): The process is waiting for an I/O operation to complete.
> - Zombie (Z): A process may create a number of child processes, which can exit while the parent is still active. However, the data structures that the kernel creates in memory to keep track of these child processes have to be maintained until the parent find out about the status of its child. These terminated processes who still have associated data structures in memory are called zombies.

While looking at the summary area, it is also good practice to check if any zombie processes exist (on the `Tasks` row); a high number of zombies is indicative of a system problem.

The CPU-related statistics are on the `%CPU(s)` row:

- us: Time the CPU spends executing processes for users in “user space.”
- sy: Time spent running system “kernel space” processes.
- ni: Time spent executing processes with a manually set "nice" value (nice values determine the priority of a process relative to others - higher nice values of a process means that process will get a lower priority to run).
- id: CPU idle time.
- wa: Time the CPU spends waiting for I/O to complete.
- hi: Time spent servicing hardware interrupts.
- si: Time spent servicing software interrupts.
- st: Time lost due to running virtual machines (“steal time”).

For systems with multiple CPU cores, we can see the per-core load by pressing "1" in the interface; another useful way of visualisation is to have a graphical display of CPU load: this can be done by pressing "t" in the `top` interface. Below is an example of `top` with both "1" and "t" pressed:

```
top - 12:11:56 up 1 day, 23:12,  4 users,  load average: 2.76, 2.86, 2.97
Tasks:  58 total,   1 running,  57 sleeping,   0 stopped,   0 zombie
%Cpu0  :   5.6/1.6     7[|||||||||
]
%Cpu1  :  59.8/40.2
100[||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||||]
%Cpu2  :  19.0/2.0    21[||||||||||||||||||||||
```

```
]
%Cpu3  :  20.5/3.1    24[|||||||||||||||||||||||
]
%Cpu4  :   2.1/3.4     5[|||||
]
%Cpu5  :   0.0/0.3     0[
]
%Cpu6  :   1.7/0.7     2[|||
]
%Cpu7  :   2.0/2.0     4[||||
]
GiB Mem :   31.267 total,   24.086 free,    4.059 used,    3.122 buff/cache
GiB Swap:    0.000 total,    0.000 free,    0.000 used.   26.328 avail Mem

  PID USER      PR  NI    VIRT    RES    SHR S  %CPU %MEM     TIME+ COMMAND
  260 root      20   0 10.783g 1.486g 191704 S 142.7  4.8 521:41.08 vpp_main
  148 root      20   0  399540 120656  44336 S   2.3  0.4   3:15.48 lldpd
  124 root      20   0  461888 137532  59312 S   2.0  0.4   8:22.26 subscriberd.1
  136 root      20   0  485168 183640  58500 S   2.0  0.6  98:59.56 igmp.iod.1
  180 root      20   0  588120 152332  52132 S   2.0  0.5   8:28.70 bgp.iod.1
  117 root      20   0  441872 137428  52904 S   1.7  0.4   9:59.74 pim.iod.1
  169 root      20   0  410648 131128  52828 S   1.7  0.4   8:50.00 pppoed.1
  171 root      20   0  425068 148420  36016 S   1.7  0.5   4:50.66 resmond
  176 root      20   0  388964 116732  40536 S   1.7  0.4   8:08.61 l2tpd.1
  <...output omitted...>
```

The next two lines are dedicated to memory information, and as expected, the “total”, “free” and “used” values have their usual meanings. The “avail mem” value is the amount of memory that can be allocated to processes without causing more swapping.

As with "t", the same thing can be done for displaying memory usage, but this time we will press "m". It is also worth noting that we can change the units in which memory values are displayed by pressing "E" (pressing repeatedly will cycle through kibibytes, mebibytes, gibibytes, tebibytes, and pebibytes). The following example shows the unit changed from kibi to gibibytes:

```
top - 12:25:19 up 1 day, 23:26,  4 users,  load average: 3.29, 3.12, 3.05
Tasks:  58 total,   1 running,  57 sleeping,   0 stopped,   0 zombie
%Cpu(s):  17.2/6.9    24[|||||||||||||||||||||||
]
GiB Mem :   31.267 total,   24.081 free,    4.063 used,    3.123 buff/cache
GiB Swap:    0.000 total,    0.000 free,    0.000 used.   26.323 avail Mem
<...output omitted...>
```

Moving to the lower half of the output (the task area), here we can see the list of processes that are running on the system. Below you can find a short explanation for each of the columns in the task area:

`top` *task area columns description*

Name	Description
PID	process ID, a unique positive integer that identifies a process.

Name	Description
USER	the "effective" username of the user who started the process; Linux assigns a real user ID and an effective user ID to processes; the second one allows a process to act on behalf of another user (e.g.: a non-root user can elevate to root in order to install a package).
PR and NI	NI show the "nicety" value of a process, while the "PR" shows the scheduling priority from the perspective of the kernel. Higher nice values give a process a lower priority.
VIRT, RES, SHR and %MEM	these fields are related to the memory consumed by each process. “VIRT” is the total amount of memory consumed by a process. “RES” is the memory consumed by the process in RAM, and “%MEM” shows this value as a percentage of the total RAM available. “SHR” is the amount of memory shared with other processes.
S	state of the process, in single letter form.
TIME+	total CPU time used by the process since it started, in seconds/100.
COMMAND	the name of the process.

From a troubleshooting standpoint, check for processes that consume large amounts of CPU and/or memory. In the task area, of interest are the `RES`, for memory, and `%CPU` columns.

For a cleaner (and possibly more relevant) output of `top`, we can sort only the active processes to be displayed, by running `top -i`, and we can sort even further by CPU usage, by pressing Shift+P while running `top` (or by initially running `top -o %CPU`):

```
supervisor@rtbrick:~$ top -i

top - 23:55:20 up 1 day, 10:56,  0 users,  load average: 2.98, 2.87, 2.79
Tasks:  46 total,   1 running,  45 sleeping,   0 stopped,   0 zombie
%Cpu(s):  9.6 us,  6.5 sy,  0.0 ni, 83.7 id,  0.0 wa,  0.0 hi,  0.3 si,  0.0 st
KiB Mem : 32785636 total, 26168764 free,  4137340 used,  2479532 buff/cache
KiB Swap:        0 total,        0 free,        0 used. 27832552 avail Mem

  PID USER      PR  NI    VIRT    RES    SHR S  %CPU %MEM     TIME+ COMMAND
  260 root      20   0 10.564g 1.474g 177952 S 110.0  4.7   2475:13 vpp_main
  112 root      20   0  438592 140908  47112 S   2.0  0.4  39:40.10 igmp.iod.1
  129 root      20   0  399544 118640  44244 S   2.0  0.4  16:40.52 lldpd
  156 root      20   0  461888 134852  59328 S   2.0  0.4  41:22.55 subscriberd.1
  166 root      20   0  408076 117936  43416 S   2.0  0.4  39:39.87 pim.iod.1
  183 root      20   0  586944 144644  51256 S   2.0  0.4  41:42.46 bgp.iod.1
  108 root      20   0  406552 122028  46576 S   1.7  0.4  39:57.25 pppoed.1
  136 root      20   0  425212 147080  35636 S   1.7  0.4  24:43.47 resmond
  176 root      20   0  392036 114596  40312 S   1.7  0.3  40:23.35 l2tpd.1
```

```
  193 root      20   0 1453420 929224  93728 S   1.0  2.8  18:35.60 confd
  168 root      20   0 3424392  41132   9824 S   0.7  0.1 127:35.58 rtbrick-resmond
  125 root      20   0  434464 132772  50396 S   0.3  0.4   2:54.41 mribd
  215 root      20   0 1527800  12736   5952 S   0.3  0.0   0:10.43 rtbrick-restcon
  266 root      20   0  837180 107808  35424 S   0.3  0.3  19:30.23 prometheus
```

As with the example above, we can also filter by any column present in the task area.

If, for example, a process is hogged and starts consuming too much CPU or memory, thus preventing the good functioning of the system, `top` offers the option to kill the respective process: you can press "k" and enter the process ID of the process to be killed; in the example below, the operator will terminate the `cron` process (make sure to run `top` as root when terminating processes spawned with the root user):

```
top - 07:39:16 up 1 day, 18:40,  3 users,  load average: 2.89, 2.90, 2.91
Tasks:  56 total,   2 running,  54 sleeping,   0 stopped,   0 zombie
%Cpu(s): 10.7 us,  7.5 sy,  0.0 ni, 81.7 id,  0.0 wa,  0.0 hi,  0.2 si,  0.0 st
KiB Mem : 32785636 total, 26042276 free,  4145480 used,  2597880 buff/cache
KiB Swap:        0 total,        0 free,        0 used. 27766808 avail Mem
PID to signal/kill [default pid = 260] 126
  PID USER      PR  NI    VIRT    RES    SHR S  %CPU %MEM     TIME+ COMMAND
  260 root      20   0 10.559g 1.471g 181376 R 106.2  4.7 174:41.75 vpp_main
12192 supervi+  20   0   39572   3564   3048 R   6.2  0.0   0:00.01 top
    1 root      20   0   77448   8740   6840 S   0.0  0.0   0:00.27 systemd
   21 root      19  -1   70268  12152  11476 S   0.0  0.0   0:00.37 systemd-journal
   33 root      20   0   42584   3992   2980 S   0.0  0.0   0:00.20 systemd-udevd
   75 systemd+  20   0   71860   5388   4792 S   0.0  0.0   0:00.03 systemd-network
   81 systemd+  20   0   70640   5088   4532 S   0.0  0.0   0:00.05 systemd-resolve
  107 root      20   0 1604588  15864   8376 S   0.0  0.0   0:00.77 rtbrick-hostcon
  109 root      20   0  612252 189544  90092 S   0.0  0.6   0:10.33 etcd
  114 syslog    20   0  263036   4164   3652 S   0.0  0.0   0:00.10 rsyslogd
  117 root      20   0  408076 119448  43908 S   0.0  0.4   2:50.89 pim.iod.1
  120 root      20   0  503648 151880  66984 S   0.0  0.5   0:11.60 ifmd
  <...output omitted...>
```

Alternatively, `ps` can be used; `ps` is an utility for viewing information related with the processes on a system; it's abbreviated from "Process Status", and gets its information from /proc. It can be used in conjunction with tools like `top`, or standalone. Usually you would run `ps` after seeing a summary with `top`, for example. `ps` is useful to get more information about some specific process (for example the command - or arguments - a process is executed with). Normally `ps` is executed with one or more options, in order to obtain a meaningful output.

Common `ps` options

Name	Description
e	Show all processes
u	Select processes by effective user ID (EUID) or name
f	Full-format listing (there is also F - Extra full format)

Name	Description
L	Show threads

Some common example are:

- listing all running processes, detailed

```
supervisor@rtbrick:~$ ps -ef
UID        PID  PPID  C STIME TTY          TIME CMD
root         1     0  0 17:07 ?        00:00:00 /sbin/init
root        23     1  0 17:07 ?        00:00:00 /lib/systemd/systemd-journald
root        31     1  0 17:07 ?        00:00:00 /lib/systemd/systemd-udevd
systemd+    53     1  0 17:07 ?        00:00:00 /lib/systemd/systemd-networkd
systemd+    94     1  0 17:07 ?        00:00:00 /lib/systemd/systemd-resolved
root       136     1  1 17:07 ?        00:03:46 /usr/local/bin/bd -i /etc/rtbrick/bd/config/lldpd.json
syslog     138     1  0 17:07 ?        00:00:00 /usr/sbin/rsyslogd -n
root       139     1  1 17:07 ?        00:06:53 /usr/local/bin/bd -i /etc/rtbrick/bd/config/pim_iod.json
root       142     1  1 17:07 ?        00:07:06 /usr/local/bin/bd -i /etc/rtbrick/bd/config/bgp_iod.json
root       145     1  0 17:07 ?        00:00:18 /usr/local/bin/bd -i /etc/rtbrick/bd/config/isis_appd.json
<...output omitted...>
```

- listing all running processes and threads

```
supervisor@rtbrick:~$ ps -eLf
UID        PID  PPID   LWP  C NLWP STIME TTY          TIME CMD
<...output omitted...>
root       136     1   136  1    1 17:07 ?        00:03:48 /usr/local/bin/bd -i /etc/rtbrick/bd/config/lldpd.json
root       139     1   139  1    1 17:07 ?        00:06:56 /usr/local/bin/bd -i /etc/rtbrick/bd/config/pim_iod.json
root       142     1   142  1    1 17:07 ?        00:07:09 /usr/local/bin/bd -i /etc/rtbrick/bd/config/bgp_iod.json
root       145     1   145  0    1 17:07 ?        00:00:18 /usr/local/bin/bd -i /etc/rtbrick/bd/config/isis_appd.json
root       147     1   147  1    1 17:07 ?        00:07:04 /usr/local/bin/bd -i /etc/rtbrick/bd/config/isis_iod.json
<...output omitted...>
root       157     1   157  0    1 17:07 ?        00:00:18 /usr/local/bin/bd -i /etc/rtbrick/bd/config/policy_server.json
root       160     1   160  0   19 17:07 ?        00:00:00 /usr/local/bin/rtbrick-hostconfd -proxy-onl-config
http://10.0.3.1:22022
root       160     1   202  0   19 17:07 ?        00:00:00 /usr/local/bin/rtbrick-hostconfd -proxy-onl-config
http://10.0.3.1:22022
root       160     1   203  0   19 17:07 ?        00:00:00 /usr/local/bin/rtbrick-hostconfd -proxy-onl-config
http://10.0.3.1:22022
<...output omitted...>
root       165     1   165  0    3 17:07 ?        00:00:18 /usr/bin/python3 /usr/local/bin/rtbrick-resmond-agent
root       314     1   349  0   22 17:07 ?        00:00:01 /usr/local/bin/alertmanager
--config.file=/etc/prometheus/alertmanager.yml --storage.path=/var/db/alertmanager
root       314     1   366  0   22 17:07 ?        00:00:01 /usr/local/bin/alertmanager
--config.file=/etc/prometheus/alertmanager.yml --storage.path=/var/db/alertmanager
root       314     1   367  0   22 17:07 ?        00:00:01 /usr/local/bin/alertmanager
--config.file=/etc/prometheus/alertmanager.yml --storage.path=/var/db/alertmanager
<...output omitted...>
```

- listing all processes run by a user

```
supervisor@rtbrick:~$ ps -u syslog -f
UID        PID  PPID  C STIME TTY          TIME CMD
syslog     138     1  0 17:07 ?        00:00:00 /usr/sbin/rsyslogd -n
```

```
supervisor@rtbrick:~$
```

Along with `ps` you can use `pgrep` and `pkill` to search, and then terminate a process:

```
supervisor@rtbrick:~$ pgrep -u root -a
1 /sbin/init
23 /lib/systemd/systemd-journald
31 /lib/systemd/systemd-udevd
136 /usr/local/bin/bd -i /etc/rtbrick/bd/config/lldpd.json
139 /usr/local/bin/bd -i /etc/rtbrick/bd/config/pim_iod.json
142 /usr/local/bin/bd -i /etc/rtbrick/bd/config/bgp_iod.json
145 /usr/local/bin/bd -i /etc/rtbrick/bd/config/isis_appd.json
147 /usr/local/bin/bd -i /etc/rtbrick/bd/config/isis_iod.json
149 /usr/local/bin/bd -i /etc/rtbrick/bd/config/etcd.json
152 /usr/local/bin/bd -i /etc/rtbrick/bd/config/resmond.json
154 /usr/local/bin/bd -i /etc/rtbrick/bd/config/staticd.json
<...output omitted...>
314 /usr/local/bin/alertmanager --config.file=/etc/prometheus/alertmanager.yml --storage.path=/var/db/alertmanager
316 /usr/local/bin/prometheus --config.file=/etc/prometheus/prometheus.yml --storage.tsdb.retention.time=5d
--storage.tsdb.path=/var/db/prometheus
<...output omitted...>
supervisor@rtbrick:~$ pkill prometheus
```

2.6.2. Disk Space

Another issue that can affect the functioning of the system is the lack of disk space; in severe situations, the system will become unusable. From this standpoint, checking disk space is one of the first things you do when doing first troubleshooting steps.

On Linux-based systems there are two main tools to check disk space: `du` (disk usage) and `df` (disk free). As in the case with `ps` and `top`, it is important to understand the uses cases for the two, and how they can complement each other.

> Normally, you would first use `df` to have a quick look of the overall system disk space, then you would use `du` to look deeper into the problem. This approach is due to how these two tools work: `df` reads the superblocks only and trusts it completely, while `du` traverses a directory and reads each object, then sums the values up. This means that, most of the times, there will be differences between the exact values reported by these two; you can say that `df` sacrifices accuracy for speed.

First, we can look at the total space on the switch (we run the command in RtBrick Host):

```
supervisor@5916-nbg1:~$ df -h
Filesystem      Size  Used Avail Use% Mounted on
devtmpfs        1.0M     0  1.0M   0% /dev
/dev/sdb7       113G  5.2G  102G   5% /
/dev/sdb6       2.0G  1.2G  677M  64% /mnt/host/images
/dev/sdb1       256M  252K  256M   1% /boot/efi
/dev/sdb4       120M   43M   69M  39% /mnt/host/boot
/dev/sdb5       120M  1.6M  110M   2% /mnt/host/config
tmpfs           3.2G  720K  3.2G   1% /run
```

```
tmpfs           5.0M     0  5.0M   0% /run/lock
tmpfs           6.3G     0  6.3G   0% /run/shm
cgroup           12K     0   12K   0% /sys/fs/cgroup
tmpfs           6.0G  546M  5.5G   9% /shm
supervisor@5916-nbg1:~$
```

We then verify container disk space, by looking at the general snapshot of the system:

```
supervisor@rtbrick:~$ df -h
Filesystem
Size  Used Avail Use% Mounted on
/var/cache/rtbrick/imagestores/847c6ecd-df58-462e-a447-38c620a12fe1/rbfs-cont/rbfs-accessleaf-qmx-20.10.0-
g4internal.20201103065150+Bmvpn.C1067d22e/rootfs  113G  5.1G  102G   5% /
none
492K     0  492K   0% /dev
/dev/sdb7
113G  5.1G  102G   5% /var/log
tmpfs
6.0G  546M  5.5G   9% /shm
devtmpfs
1.0M     0  1.0M   0% /dev/mem
tmpfs
16G  4.3M   16G   1% /dev/shm
tmpfs
16G  9.0M   16G   1% /run
tmpfs
5.0M     0  5.0M   0% /run/lock
tmpfs
16G     0   16G   0% /sys/fs/cgroup
tmpfs
3.2G     0  3.2G   0% /run/user/1000
supervisor@rtbrick:~$
```

At a quick glance we can see here that the root partition has a 5% usage, from a total of 113GB. You will also notice that `/dev/sdb7` in the container has the same values as the output reported in RtBrick Host. It also has the same total size and same used space as the root filesystem. Notice the usage of the `-h` flag, which makes the output easier to read ("human readable").

Then you can verify the details of a specific directory, let’s say you want too see how much disk space is used by user files in `/usr`:

```
supervisor@rtbrick:~$ ls -l /usr/
total 44
drwxr-xr-x  1 root root 4096 Nov  3 11:54 bin
drwxr-xr-x  2 root root 4096 Apr 24  2018 games
drwxr-xr-x 37 root root 4096 Nov  3 06:59 include
drwxr-xr-x  1 root root 4096 Nov  3 11:54 lib
drwxr-xr-x  1 root root 4096 Nov  3 06:57 local
drwxr-xr-x  2 root root 4096 Nov  3 06:59 sbin
drwxr-xr-x  1 root root 4096 Nov  3 11:54 share
drwxr-xr-x  2 root root 4096 Apr 24  2018 src
supervisor@rtbrick:~$ du -sh /usr/
2.6G    /usr/
supervisor@rtbrick:~$ ls -l /usr
```

```
total 44
drwxr-xr-x  1 root root 4096 Nov  3 11:54 bin
drwxr-xr-x  2 root root 4096 Apr 24  2018 games
drwxr-xr-x 37 root root 4096 Nov  3 06:59 include
drwxr-xr-x  1 root root 4096 Nov  3 11:54 lib
drwxr-xr-x  1 root root 4096 Nov  3 06:57 local
drwxr-xr-x  2 root root 4096 Nov  3 06:59 sbin
drwxr-xr-x  1 root root 4096 Nov  3 11:54 share
drwxr-xr-x  2 root root 4096 Apr 24  2018 src
```

We then go even deeper, to check what takes most space in the `/usr` directory

```
supervisor@rtbrick:~$ du -h /usr/ | sort -rh | head -5
2.6G    /usr/
1.8G    /usr/local
1.7G    /usr/local/lib
506M    /usr/lib
169M    /usr/share
```

We used `du` in conjunction with `sort` (options `r` - reverse the result -, and `h` - compare human readable numbers -), as well as with `head`, to get only the biggest 5 directories from the output.

2.6.3. PCAP File Storage Location

PCAP (packet capture) files are stored by default in the `/var/rtbrick/packet-capture` directory. Regular users can access and manage PCAP files stored in this directory.

The following operational commands are available to manage captured packet files:

Show Command:

Syntax:

show capture file

The following table provides the command options and descriptions.

Parameter	Description
`capture file`	Shows the location of the packet-capture file and lists the available captured files.

The following example output shows the packet-capture file location and lists the available captured files.

```
supervisor@rtbrick.net: op> show capture file
Path : /var/rtbrick/packet-capture
```

```
Date    Time       Size  Filename
Sep 22  06:53   2348440  file2.pcapng
Sep 22  06:53   1029094  file1.pcapng
Sep 22  06:52  15360...  file.pcapng
Sep 22  06:52  11221...  file.pcap
```

Clear Commands:

Syntax:

The following table provides the clear command options and descriptions.

clear capture file
clear capture file <file-name>

Parameter	Description
`capture file`	Clears all the packets captured.
`capture file <file-name>`	Clears the specified packet captured.

The following example output shows the clear command to delete all the captured packet files and the clear command to delete a specific captured packet file.

```
supervisor@rtbrick.net: op> clear capture file
 file.pcap             file.pcapng           file1.pcapng          file2.pcapng
supervisor@rtbrick.net: op> clear capture file file.pcapng
Success: packet capture file 'file.pcapng' deleted
supervisor@rtbrick.net: op> show capture file
Path : /var/rtbrick/packet-capture
Date    Time       Size  Filename
Sep 22  06:53   2348440  file2.pcapng
Sep 22  06:53   1029094  file1.pcapng
Sep 22  06:52  11221...  file.pcap
supervisor@rtbrick.net: op> clear capture file
Success: cleared all packet capture files
supervisor@rtbrick.net: op> show capture file
No packet capture files present
supervisor@rtbrick.net: op>
```

3. Physical Layer

3.1. Link Failures

Link failures are one of the most common issues. First, verify the status of the interface using one of the following show commands:

```
supervisor@rtbrick: op> show interface summary
supervisor@rtbrick: op> show interface <ifp-name>
```

The administrative, link, and operational status should be "Up". Depending on your configuration, logical interfaces should have been created and IP addresses should be assigned like in this example:

```
supervisor@rtbrick: op> show interface ifp-0/0/52
Interface                Admin    Link     Oper          IPv4 Address             IPv6 Address
ifp-0/0/52               Up       Up       Up
  ifl-0/0/52/13          Up       Up       Up            -                        fe80::ba6a:97ff:fea5:923d/128
```

Verify further details of the interface using the 'detail' version of the show command:

```
supervisor@rtbrick: op> show interface ifp-0/0/52 detail
Interface:ifp-0/0/52
  Admin/Link/Operational status: Up/Up/Up
  Speed configured: 100G
  Speed maximum: 100G
  Duplex: Full
  Autonegotiation: Disabled
  Encapsulation mode: ieee
  MTU: 16360
  Maximum frame size: 16360
  Interface type: ethernet
  Interface index: 124929
  MAC: b8:6a:97:a5:92:3d
  Uptime:  Mon Nov 23 14:18:46 GMT +0000 2020
  Description: Physical interface #52 from node 0, chip 0
  Packet statistics:
    Rx packets: 263892      Tx packets: 280356
    Rx bytes: 23377027      Tx bytes: 154437883
  Interface: ifl-0/0/52/13, Instance: default
    Admin/Link/Operational status: Up/Up/Up
    IPv4/IPv6/MPLS Status: Up/Up/Up
    IPv4/IPv6/MPLS MTU: 1500/1500/1500
    Interface type: Logical Sub interface
    Interface index: 106497
    MAC: b8:6a:97:a5:92:3d
    IPv4 Address             IPv6 Address
```

```
    -                        fe80::ba6a:97ff:fea5:923d/128
    Packet statistics:
      Ingress forwarded packets: 262991            Ingress forwarded bytes: 23313212
      Ingress drop Packets: 0                      Ingress drop bytes: 0
      Egress forwarded packets: 15490              Egress forwarded bytes: 3063609
      Egress drop packets: 0                       Egress drop bytes: 0
```

Next, verify the interface statistics. These will show common link errors:

```
supervisor@rtbrick: op> show interface <ifp-name> statistics
```

You can also inspect the following BDS tables for even more detailed information:

```
supervisor@rtbrick: op> show datastore ifmd table global.interface.physical
supervisor@rtbrick: op> show datastore ifmd table global.interface.logical
supervisor@rtbrick: op> show datastore ifmd table global.interface.address
supervisor@rtbrick: op> show datastore fibd table local.bcm.qmx.port
```

Identify the type of optics and check the optics data:

```
supervisor@rtbrick: op> show optics inventory
supervisor@rtbrick: op> show optics interface <ifp-name>
```

The output of the 'show optics' command will display the Tx and Rx levels like in the following example. In addition, particularly check for warnings or alarms. These will typically indicate the cause of the issue. Please note the 'show optics' command does not work for passive Direct Attach Cable (DAC).

```
supervisor@rtbrick: op> show optics interface ifp-0/0/52
Physical Interface: ifp-0/0/52
  Lane Id                                              : 1
  Laser bias current                                   : 85.100 mA
  Laser tx power                                       : 1.1107 mW / 0.46 dBm
  Laser rx power                                       : 0.5521 mW / -2.58 dBm
  Module temperature                                   : 30.41 degree celsius
  Module voltage                                       : 3.199 V
  TX disable                                           : false
  High power class enable                              : true
  Laser TX loss of signal                              : false
  Laser TX loss of lock                                : false
  Laser RX loss of signal                              : false
  Laser RX loss of lock                                : false
  <...>
```

You can also show detailed optics information using the BDS tables:

```
supervisor@rtbrick: op> show datastore resmond table global.chassis_0.resource.optics.inventory
supervisor@rtbrick: op> show datastore resmond table global.chassis_0.resource.optics.module
```

If there are continuous or reoccurring interface issues like interface flapping, enable logging for the ifm module and inspect the log table as described in the Logging section.

3.2. Hardware Failures

If you suspect a hardware failure or issue, verify sensor information available at the RFBS container layer. Please note this section applies to hardware switches only. Sensor information is not available on virtual deployments.

```
supervisor@rtbrick: op> show sensor system-led
supervisor@rtbrick: op> show sensor power-supply
supervisor@rtbrick: op> show sensor fan
supervisor@rtbrick: op> show sensor temperature
```

The sensor information might show hardware failures like in this example:

```
supervisor@rtbrick: op> show sensor power-supply
Name              Current In  Current Out Voltage In  Voltage Out Power In    Power Out   Status
PSU-1             0 mA        11593 mA    0 mV        11984 mV    0 mW        139000 mW   PRESENT
PSU-2             0 mA        0 mA        0 mV        0 mV        0 mW        0 mW        PRESENT, FAILED
```

Next, verify the status of the hardware at the RtBrick Host layer:

```
supervisor@spine1:~# sudo onlpdump
```

> Due to a known issue, the 'sudo onlpdump' command does not work in the current release for the user supervisor. As a workaround switch to user root using 'sudo -i' and then enter the 'onlpdump' command.

The onlpdump tool provides detailed information about the system and its components, and might show hardware failures like in the following example:

```
supervisor@spine1:~# sudo onlpdump
   <...>
   psu @ 1 = {
       Description: PSU-1
       Model:  NULL
       SN:     NULL
       Status: 0x00000003 [ PRESENT,FAILED ]
       Caps:   0x00000000
       Vin:    0
       Vout:   0
```

```
        Iin:    0
        Iout:   0
        Pin:    0
        Pout:   0
    }
```

If you have identified or suspect an optics issue, verify the status of the optics at the RtBrick Host layer. The onlpdump -S tool will show the type of optic installed:

```
supervisor@spine1:~# sudo onlpdump -S
Port  Type            Media   Status  Len    Vendor            Model             S/N
----  --------------  ------  ------  -----  ----------------  ----------------  ----------------
   0  NONE
   <...>
   52  100GBASE-CR4    Copper          3m     Fiberstore        QSFP28-100G-DAC   I2706060007
   <...>
```

The following example shows an optic failure:

```
supervisor @localhost:~# sudo onlpdump -S
Port  Type            Media   Status  Len    Vendor            Model             S/N
----  --------------  ------  ------  -----  ----------------  ----------------  ----------------
<...>
06-27 08:27:49.823107 [x86_64_accton_as5916_54xk] Unable to read eeprom from port(51), size is different!
  51  Error E_INTERNAL
```

4. Application Layer

4.1. Fabric Operation

4.1.1. Fabric Protocols

Verify L2 connectivity using LLDP. LLDP allows to quickly verify the topology and connectivity between your devices:

```
supervisor@rtbrick>LEAF01: op> show lldp neighbor
Neighbor name      Status  Remote port ID     Local port ID      Neighbor MAC address  Last received     Last sent
spine2             Up      memif-0/1/1        memif-0/1/1        7a:52:68:60:01:01     0:00:11 ago       0:00:12 ago
spine2             Up      memif-0/1/2        memif-0/1/2        7a:52:68:60:01:02     0:00:06 ago       0:00:09 ago
leaf1              Up      memif-0/1/1        memif-0/2/1        7a:47:fc:60:01:01     0:00:07 ago       0:00:10 ago
leaf2              Up      memif-0/1/1        memif-0/2/2        7a:28:3b:60:01:01     0:00:13 ago       0:00:14 ago
```

Verify IPv6 neighbor discovery:

```
supervisor@rtbrick>LEAF01: op> show neighbor ipv6
Instance                MAC Address          Interface             IP Address                Dynamic  Entry Time
default                 7a:52:68:60:01:01    memif-0/1/1/1         fd3d:3d:100:a::2          true     Wed Nov 18 18:33:28
default                 7a:52:68:60:01:01    memif-0/1/1/1         fe80::7852:68ff:fe60:101  true     Wed Nov 18 18:32:30
default                 7a:52:68:60:01:02    memif-0/1/2/1         fe80::7852:68ff:fe60:102  true     Wed Nov 18 18:32:30
default                 7a:47:fc:60:01:01    memif-0/2/1/1         fe80::7847:fcff:fe60:101  true     Wed Nov 18 18:32:32
default                 7a:28:3b:60:01:01    memif-0/2/2/1         fe80::7828:3bff:fe60:101  true     Fri Nov 20 14:23:27
```

If there is no LLDP peer or no IPv6 neighbor discovered on an interface, it typically indicates a connectivity issue. BGPv6 peers cannot be established. At this point, proceed with the following steps:

- Verify the interface as described in the Link Failures section.
- Verify connectivity to the neighbor using Ping as described in the Fabric Connectivity section.
- Check the running configuration for the fabric interfaces.

If IPv6 neighbors have been discovered, verify the BGP sessions. BGP peers should have been auto-discovered on all fabric interfaces. If a BGP session is operational, it will be in "Established" state. The "PfxRcvd" and "PfxSent" show that BGP routes are exchanged:

```
supervisor@rtbrick>LEAF01: op> show bgp peer
Instance name: default
Peer                                Remote AS    State        Up/Down Time              PfxRcvd             PfxSent
leaf1                               4200000201   Established  4d:17h:00m:27s            4                   14
spine2                              4200000100   Established  0d:00h:05m:11s            8                   14
```

If IPv6 neighbors have been discovered, but BGP sessions are not established, perform the following steps:

- Inspect the output of the 'show bgp peer detail' command.

- Check the BGP running configuration.
- Enable and verify BDS logging for bgp.iod and the BGP module as described in the Logging section.

If BGP sessions are established and routes are being exchanged, BGP will typically be fully operational. Next, verify BGP routes for IPv6 unicast and IPv6 labeled unicast:

```
supervisor@rtbrick>LEAF01: op> show bgp rib-local ipv6 unicast
supervisor@rtbrick>LEAF01: op> @spine1: op> show bgp rib-local ipv6 labeled-unicast
```

If you have multiple instances with a high number of routes, you can optionally filter the output using the 'instance default' command option. For both IPv6 and IPv6 LU, there should be one or multiple route(s) for each of the spine and leaf IPv6 loopback addresses like in this example:

```
supervisor@rtbrick>LEAF01: op> show bgp rib-local ipv6 unicast
Instance: default, AFI: ipv6, SAFI: unicast
Prefix                              Snd-Path-ID     Rcv-Path-ID     Peer                                Next-Hop
Up Time
fd3d:3d:0:99::1/128                 513421047       2               ::
0d:00h:00m:48s
fd3d:3d:0:99::2/128                 748525752       0               fe80::7852:68ff:fe60:101
fe80::7852:68ff:fe60:101            0d:00h:00m:36s
fd3d:3d:0:99::3/128                 30278035        0               fe80::7847:fcff:fe60:101
fe80::7847:fcff:fe60:101            0d:00h:00m:36s
fd3d:3d:0:99::4/128                 748525752       0               fe80::7852:68ff:fe60:101
fe80::7852:68ff:fe60:101            0d:00h:00m:36s
```

4.1.2. Transport-layer Routing

The BGP routes described above are subscribed by ribd. ribd will the select the best routes from multiple sources and add them to the actual routing table. In this guide we refer to the connectivity between the fabric devices as transport-layer, as opposed to the service-laver connectivity in the VPNs which are deployed on top.

Verify the IPv6 unicast and IPv6 labeled unicast routing tables. Same like for the BGP commands, you can optionally filter the output using the 'instance default' command option:

```
supervisor@rtbrick>LEAF01: op> show route ipv6 unicast
supervisor@rtbrick>LEAF01: op> show route ipv6 labeled-unicast
```

For both IPv6 and IPv6 LU, there should be one or multiple route(s) for each of the spine and leaf IPv6 loopback addresses, each with a valid IPv6 nexthop address and exit interface. Assuming you are using BGPv6 as a fabric protocol, i.e. no additional protocols like IS-IS in the default instance, these will be BGP routes only. If all expected routes exist, it typically indicates that the fabric is working fine from a control-plane perspective.

4.1.3. Fabric Connectivity

In order to troubleshoot date-plane issues, you can verify connectivity using the RBFS ping tool. First, verify connectivity to the auto-discovered link-local neighbors. Specify the interface on which the neighbor has been discovered as the source interface. Example:

```
supervisor@rtbrick>LEAF01: op> show neighbor ipv6
Instance                MAC Address          Interface             IP Address                Dynamic  Entry Time
default                 7a:52:68:60:01:01    memif-0/1/1/1         fe80::7852:68ff:fe60:101  true     Wed Nov 18 18:32:30
<...>

supervisor@rtbrick>LEAF01: op> ping fe80::7852:68ff:fe60:101 source-interface memif-0/1/1/1
68 bytes from fe80::7852:68ff:fe60:101: icmp_seq=1 ttl=63 time=8.6318 ms
<...>
Statistics: 5 sent, 5 received, 0% packet loss
```

Second, verify connectivity to the spine and leaf loopback addresses learned via BGP. As a source address that is advertised via BGP in the default instance, so that it is reachable from the remote device. This depends on your deployment, but typically it is the loopback interface in the default instance. Example:

```
supervisor@rtbrick>LEAF01: op> show route ipv6 unicast
Instance: default, AFI: ipv6, SAFI: unicast
Prefix/Label                              Source            Pref    Next Hop
Interface
fd3d:3d:0:99::1/128                       direct            0       fd3d:3d:0:99::1
lo-0/0/0/1
fd3d:3d:0:99::3/128                       bgp               20
fe80::7847:fcff:fe60:101                  memif-0/2/1/1
fd3d:3d:0:99::4/128                       bgp               200
 <...>

supervisor@rtbrick>LEAF01: op> ping fd3d:3d:0:99::3 source-interface lo-0/0/0/1
68 bytes from fd3d:3d:0:99::3: icmp_seq=1 ttl=63 time=10.0001 ms
<...>
```

Next, verify MPLS connectivity by specifying IPv6 LU with the ping tool. Example:

```
supervisor@rtbrick>LEAF01: op> ping fd3d:3d:0:99::3 instance default afi ipv6 safi
labeled-unicast source-interface lo-0/0/0/1
68 bytes from fd3d:3d:0:99::3: icmp_seq=1 ttl=63 time=2.8520 ms
<...>
```

If the fabric connectivity is broken, use the RBFS traceroute tool to narrow down the location of the issue. Same as for ping, you need to use a source address that is advertised via BGP in the default instance and reachable from the remote device. Example:

```
supervisor@rtbrick>LEAF01: op> traceroute fd3d:3d:0:99::4 source-interface lo-0/0/0/1
```

```
traceroute to fd3d:3d:0:99::4 30 hops max, 60 byte packets
1    fd3d:3d:100:a::2    13.270 ms      4.973 ms      6.294 ms
2    fd3d:3d:0:99::4    18.825 ms      17.058 ms      17.764 ms
```

4.2. Subscriber Services

The term subscriber describes an access user or session from a higher level decoupled from underlying protocols like PPPoE or IPoE. Subscribers in RBFS can be managed locally or remote via RADIUS. Each subscriber is uniquely identified by a 64bit number called subscriber-id.

4.2.1. Subscriber Sessions

A good starting point for troubleshooting subscriber services is to verify the status of the subscriber sessions. If a session is fully operational, its state will be ESTABLISHED like in the following example:

```
supervisor@rtbrick>LEAF01: op> show subscriber
Subscriber-Id          Interface        VLAN      Type   State
72339069014638600      ifp-0/0/1        1:1       PPPoE  ESTABLISHED
72339069014638601      ifp-0/0/1        1:2       PPPoE  ESTABLISHED
72339069014638602      ifp-0/0/1        1:3       PPPoE  ESTABLISHED
72339069014638603      ifp-0/0/3        2000:7    L2TP   ESTABLISHED
```

Alternative use `show subscriber detail` which shows further details like username, Agent-Remote-Id (aka Line-Id) or Agent-Circuit-Id if screen width is large enough to print all those information. The following table describes all possible subscriber session states:

State	Description
INIT	Initial subscriber state.
AUTHENTICATING	The subscriber is waiting for authentication response.
AUTH ACCEPTED	Authentication is accepted.
AUTH REJECTED	Authentication failed.
TUNNEL SETUP	Subscriber is tunnelled via L2TPv2 waiting for L2TP session setup completed.
ADDRESS ALLOCATED	IP addresses allocated.
ADDRESS REJECTED	IP addresses rejected (pool exhaust, duplicate or wrong addresses).
FULL	Subscriber forwarding state established.
ACCOUNTING	Subscriber accounting started sending RADIUS Accounting-Request-Start.
ESTABLISHED	The subscriber becomes ESTABLISHED after response to RADIUS Accounting-Request-Start if RADIUS accounting is enabled otherwise immediately after FULL.

State	Description
TERMINATING	The subscriber is terminating and remains in this state until response to RADIUS Accounting-Request-Start if RADIUS accounting is enabled

Further details per subscriber can be shown with the following commands.

```
supervisor@rtbrick>LEAF01: op> show subscriber 72339069014638600
  <cr>
  access-line           Subscriber access line information
  accounting            Subscriber accounting information
  acl                   Subscriber ACL information (filter)
  detail                Detailed subscriber information
  qos                   Subscriber QoS information
```

If a subscriber has been torn down or is not able to setup, inspect the the terminate history which indicates the teardown reason.

If a previously working subscriber session has been torn down, inspect the termination history which tells the actual reason.

```
supervisor@rtbrick>LEAF01: op> show subscriber history
Subscriber-Id          Timestamp                            Terminate Code
72339069014638594      Tue Nov 17 08:13:17 GMT +0000 2020   PPPoE LCP Terminate Request Received
72339069014638595      Tue Nov 17 08:13:17 GMT +0000 2020   PPPoE LCP Terminate Request Received
72339069014638596      Tue Nov 17 08:13:17 GMT +0000 2020   PPPoE LCP Terminate Request Received
72339069014638597      Tue Nov 17 08:13:17 GMT +0000 2020   PPPoE LCP Terminate Request Received
72339069014638598      Tue Nov 17 08:13:17 GMT +0000 2020   PPPoE LCP Terminate Request Received
72339069014638599      Tue Nov 17 08:13:46 GMT +0000 2020   L2TP CDN Request
72339069014638600      Tue Nov 17 08:39:01 GMT +0000 2020   PPPoE Clear Session
```

This command shows also further information like interface, VLAN and MAC address if screen is width enough.

Optionally you can view even more detailed information by inspecting the following key BDS tables used for subscriber management:

- Subscriber table – main table including all subscribers with all states and parameters:

```
supervisor@rtbrick>LEAF01: op> show datastore subscriberd.1 table
local.access.subscriber
```

- Subscriber interface table:

```
supervisor@rtbrick>LEAF01: op> show datastore subscriberd.1 table
global.access.1.subscriber.ifl
```

- Subscriber termination history table:

```
supervisor@rtbrick>LEAF01: op> show datastore subscriberd.1 table
local.access.subscriber.terminate.history
```

4.2.2. RADIUS

Remote Authentication Dial-In User Service (RADIUS) is a networking protocol that provides centralized Authentication, Authorization and Accounting (AAA) management for all types of subscribers (PPPoE or IPoE). RADIUS servers can perform as authentication and accounting servers or change of authorization (CoA) clients. Authentication servers maintain authentication records for subscribers.

The subscriber daemon requests authentication in RADIUS access-request messages before permitting subscribers access. Accounting servers handle accounting records for subscribers. The subscriber daemon transmits RADIUS accounting-start, interim and stop messages to the servers. Accounting is the process of tracking subscriber activity and network resource usage in a subscriber session. This includes the session time called time accounting and the number of packets and bytes transmitted during the session called volume accounting. A RADIUS server can behave as a change of authorization (CoA) client allowing dynamic changes for subscriber sessions. The subscriber daemon supports both RADIUS CoA messages and disconnect messages. CoA messages can modify the characteristics of existing subscriber sessions without loss of service, disconnect messages can terminate subscriber sessions.

RBFS supports multiple RADIUS servers for high availability and scaling which are bundled using RADIUS profiles. The status of those profiles can be shown with the following command.

```
supervisor@rtbrick>LEAF01: op> show radius profile
RADIUS Profile: radius-default
    NAS-Identifier: BNG
    NAS-Port-Type: Ethernet
    Authentication:
        Algorithm: ROUND-ROBIN
        Server:
            radius-server-1
            radius-server-2
    Accounting:
        State: UP
        Stop on Reject: True
        Stop on Failure: True
        Backup: True
        Algorithm: ROUND-ROBIN
        Server:
            radius-server-1
            radius-server-2
```

The profile accounting state becomes immediately ACTIVE if at least one of the referenced RADIUS

accounting servers is enabled for accounting. Otherwise the profile keeps `DISABLED` which may indicates a wrong configuration.

If RADIUS Accounting-On is enabled, the profile state becomes STARTING before UP. It is not permitted to send any accounting request start, interim or stop related to a profile in this state. It is also not permitted to send authentication requests if accounting-on-wait is configured in addition. The state becomes UP if at least one server in the accounting server list is in a state UP or higher.

A new profile added which references existing used RADIUS servers must not trigger a RADIUS Accounting-On request if at least one of the referenced servers is in a state of UP or higher.

The state of the RADIUS servers is shown with the following commands.

```
supervisor@rtbrick>LEAF01: op> show radius server
RADIUS Server            Address          Authentication State Accounting State
radius-server-1          100.0.0.1        UP                   UP
radius-server-2          100.0.0.3        ACTIVE               ACTIVE
radius-server-3          100.0.0.4        ACTIVE               ACTIVE
```

The following table explains the meaning of the different state where some of those state are applicable for accounting only.

State	Description
DISABLED	RADIUS authentication (authentication_state) or accounting (accounting-state) is disabled or server not referenced by profile.
ACTIVE	Server referenced by RADIUS profile but no valid response received.
STARTING	This state is valid for accounting (accounting-state) only during accounting-on is sending (wait for accounting-on response).
STOPPING	This state is valid for accounting (accounting-state) only during accounting-off is sending (wait for accounting-off response).
FAILED	This state is valid for accounting (accounting-state) only if accounting-on/off timeout occurs.
UP	Valid RADIUS response received
UNREACHABLE	No response received/timeout but server is still usable.
DOWN	Server is down but can be selected.
TESTING	Send a request to test if server is back again. The server will not be selected for another request in this state (use a single request to check if server is back again).
DEAD	Server is down and should not be selected.

Alternative use `show radius server <radius-server>` for further details and statistics per RADIUS server. Those statics can be cleared with `clear radius server-statistics` without any service impact.

4.2.3. PPPoE Sessions

For PPPoE sessions the state should be ESTABLISHED if local terminated or TUNNELLED for L2TPv2 tunnelled sessions.

```
supervisor@rtbrick>LEAF01: op> show pppoe session
Subscriber-Id          Interface        VLAN      MAC                State
72339069014638604      ifp-0/0/1        1:1       00:04:0e:00:00:01 ESTABLISHED
72339069014638601      ifp-0/0/1        1:2       00:04:0e:00:00:02 ESTABLISHED
72339069014638602      ifp-0/0/1        1:3       00:04:0e:00:00:03 ESTABLISHED
72339069014638603      ifp-0/0/3        2000:7    52:54:00:57:c8:29 TUNNELLED
```

Alternative use `show pppoe session detail` which shows further details like username, Agent-Remote-Id (aka Line-Id) or Agent-Circuit-Id if screen width is large enough to print all those information.

State	Description
LINKING	PPP LCP setup.
AUTHENTICATING	PPP authentication (PAP or CHAP).
NETWORKING	PPP IPCP (IPv4) and IP6CP (IPv6) setup.
ESTABLISHED	The PPPoE session becomes established if at least one NCP (IPCP or IP6CP) is established (state OPEN).
TUNNELLED	This state indicates that a PPPoE session is tunnelled via L2TPv2.
TERMINATING	PPP session teardown.
TERMINATED	PPPoE session terminated.

If PPPoE session remain in state TERMINATED, the subscriber state should be checked. Typically this happens if RADIUS Accounting-Request-Stop is still pending.

Further details per PPPoE session can be shown with the following commands.

```
supervisor@rtbrick>LEAF01: op> show pppoe session 72339069014638601
  <cr>
  detail                Detailed session information
  statistics            Protocol statistics
```

The detail command shows the states of the session and all sub-protocols with extensive information and negotiated parameters.

Session statistics are available global and per session.

```
supervisor@rtbrick>LEAF01: op> show pppoe session statistics
supervisor@rtbrick>LEAF01: op> show pppoe session 72339069014638601 statistics
```

The PPPoE discovery statistics are helpful if session setup fails in initial PPPoE tunnel setup before actual PPP negotiation is starting.

```
supervisor@rtbrick>LEAF01: op> show pppoe discovery packets
Packet           Received         Sent
PADI             17               0
PADO             0                17
PADR             17               0
PADS             0                17
PADT             1                13

supervisor@rtbrick>LEAF01: op> show pppoe discovery errors
PADI Drop No Config            : 0
PADI Drop Session Protection   : 0
PADI Drop Session Limit        : 0
PADI Drop Dup Session          : 0
PADI Drop Interface Down       : 0
PADR Drop No Config            : 0
PADR Drop Wrong MAC            : 0
PADR Drop Interface Down       : 0
PADR Drop Session Limit        : 0
PADR Drop Session Protection   : 0
PADR Drop Bad Cookie           : 0
PADR Drop Bad Session          : 0
PADR Drop Dup Session          : 0
PADR Drop No mapping Id        : 0
PADT Drop No Session           : 0
PADT Drop Wrong MAC            : 0
PADX Interface Get Failure     : 0
```

If PPPoE session protection is enabled in access configuration profile, short lived or failed sessions will be logged in the PPPoE session protection table (`local.pppoe.session.protection`).

Every session not established for at least 60 seconds per default is considered as failed or short lived session. This will block new sessions on this IFP and VLANs for one second per default which increase exponential with any further failed session until the max time of per default 300 seconds is reached. The interval is reset after 900 seconds without failed sessions.

The PPPoE session protection table include also last subscriber-id and terminate code which indicates the reason for session failures.

```
supervisor@rtbrick>LEAF01: op> show pppoe discovery protection
Interface        VLAN      Status  Attempts   Last Terminate Code
ifp-0/0/1        1:1       OK      1          PPPoE LCP Terminate Request Received
ifp-0/0/1        1:2       OK      1          PPPoE LCP Terminate Request Received
ifp-0/0/1        1:3       OK      1          PPPoE LCP Terminate Request Received
```

If status OK indicates that new session are accepted where BLOCKED means that sessions will be

rejected.

4.2.4. L2TP Sessions

For L2TPv2 tunnelled PPPoE sessions the global unique subscriber-id can be used to get information about the L2TP session.

```
supervisor@rtbrick>LEAF01: op> show l2tp subscriber 72339069014638621
Subscriber-Id: 72339069014638621
    State: ESTABLISHED
    Local TID: 45880
    Local SID: 39503
    Peer TID: 1
    Peer SID: 1
    Call Serial Number: 10
    TX Speed: 10007000 bps
    RX Speed: 1007000 bps
    CSUN: disabled
```

The following command gives a good overview over the corresponding tunnels.

```
supervisor@rtbrick>LEAF01: op> show l2tp tunnel sessions
Role Local TID Peer TID State        Preference Sessions Established Peer Name
LAC       2022        1 ESTABLISHED       10000        1           1 LNS3
LAC       3274        1 ESTABLISHED       10000        1           1 LNS8
LAC      14690        1 ESTABLISHED       10000        1           1 LNS6
LAC      29489        1 ESTABLISHED       10000        1           1 LNS9
LAC      33323        1 ESTABLISHED       10000        1           1 LNS4
LAC      35657        1 ESTABLISHED       10000        1           1 LNS10
LAC      37975        1 ESTABLISHED       10000        1           1 LNS1
LAC      45880        1 ESTABLISHED       10000        1           1 LNS7
LAC      46559        1 ESTABLISHED       10000        1           1 LNS2
LAC      58154        1 ESTABLISHED       10000        1           1 LNS5
```

Detailed information per tunnel are available via `show l2tp tunnel <TID> detail`.

L2TP tunnel statistics are available global and per tunnel.

```
supervisor@rtbrick>LEAF01: op> show l2tp tunnel statistics
supervisor@rtbrick>LEAF01: op> show l2tp tunnel 37975 statistics
```

4.2.5. Service-Layer Connectivity

A different type of issues can occur if a subscriber has successfully connected to a leaf switch, but does not have connectivity to his services, for example connecting to the Internet. The actual user traffic is carried in a VPN across the RBFS fabric. First, verify the VPN routing table on both the spine and the leaf switches. Depending on your design, there will be specific routes and/or a default

route only:

```
supervisor@rtbrick>LEAF01: op> show route ipv4 unicast instance services
Instance: services, AFI: ipv4, SAFI: unicast
Prefix/Label                    Source      Pref    Next Hop            Interface
192.168.0.3/32                  direct      0       192.168.0.3         lo-0/0/0/2
192.168.0.4/32                  bgp         20      fd3d:3d:0:99::4     memif-0/1/1/1
 <...>
```

If routes are missing already on the spine switch, there might be a routing issue between the spine and the upstream core routers or route reflectors. Further troubleshooting steps will depend on how the fabric is connected to the upstream network in your deployment. If all expected routes exists on the spine switch, but are missing on the leaf switch, verify the VPN route exchange between them. Example for verifying VPN routes advertised by the spine switch:

```
supervisor@rtbrick>LEAF01: op> show bgp rib-out ipv4 vpn-unicast peer leaf1
Instance: default, AFI: ipv4, SAFI: vpn-unicast
  Peer: leaf1, Sent routes: 2
    Prefix                      MED     LocalPref   Origin          Next Hop                AS Path
    192.168.0.3/32              0       -           Incomplete      fd3d:3d:0:99::3         4200000100, 4200000201
    192.168.0.4/32              1       -           Incomplete      fd3d:3d:0:99::4         4200000100, 4200000202
<...>
```

Example for verifying VPN routes received by the leaf switch:

```
supervisor@rtbrick>LEAF01: op> show bgp rib-in ipv4 vpn-unicast peer spine1
Instance: default, AFI: ipv4, SAFI: vpn-unicast
  Peer: spine1, Received routes: 1
    Prefix                      Path ID    Next Hop                 MED        LocalPref  AS Path
    192.168.0.4/32              0          fd3d:3d:0:99::4          1          -          4200000100, 4200000202
```

If you have a publicly routed loopback address in the services VPN, you can verify the connectivity to any well-known destination address using the RBFS Ping tool within the VPN instance:

```
supervisor@rtbrick>LEAF01: op> ping 8.8.8.8 instance services source-interface lo-0/0/1/0
68 bytes from 8.8.8.8: icmp_seq=1 ttl=63 time=21.6622 ms
<...>
Statistics: 5 sent, 5 received, 0% packet loss
```

If there is no connectivity to the IP address of your service, verify connectivity across the fabric within the instance by sending a ping between two leaf switches. This will indicate if the connectivity problem lies in the spine/leaf fabric or in the upstream network:

```
supervisor@rtbrick>LEAF01: op> ping 192.168.21.5 instance services source-interface lo-0/0/1/0
68 bytes from 192.168.21.5: icmp_seq=1 ttl=63 time=1.5511 ms
<...>
Statistics: 5 sent, 5 received, 0% packet loss
```

4.3. Host Path Capturing

You can use the RBFS built-in capture tool to verify and troubleshoot fabric as well as services protocol operation. It captures and displays all host-path traffic, that is control-plane packets sent to the CPU. It does not apply to transit traffic. This section explains the options available of the capturing tool to troubleshoot host path issues.

4.3.1. Physical Interface

You can capture all host path packets on a physical interface, including all sub-interfaces, by specifying the physical interface (IFP) name with the capture command.

capture interface <physical-interface-name> **direction** <dir>

In the previous releases, the following command captured both ingress and egress traffic on physical interfaces:

capture interface <interface> **direction both file** <filename> **start**

From this onwards, running the `capture` command on a physical interface will only capture incoming packets, even if direction `both` is specified.

> The direction `both` parameter still functions as expected (capturing both directions) when used within a virtual image.

Example

```
capture interface ifp-0/0/52 direction both
```

API To access the Operational State API that corresponds to this CLI, click here.

4.3.2. Logical Interface

If you specify a logical interface (IFL) name with the capture command, the traffic on that sub-interface will be captured only. This allows to filter for example on a specific VLAN.

capture interface <logical-interface-name> **direction** <dir>

Example

```
capture interface ifl-0/0/52/1 direction both
```

4.3.3. Shared Memory Interface

There is no BDS packet table in fibd. Instead there is a pseudo network interface of the form shm-0/0/<trap-id>, where the trap ID identifies the protocol (BGP, ISIS, PPPoE, L2TP, RADIUS). You can use the VPP internal command **show rtb-shm** to find the mapping of protocol to trap ID. This command

captures the packet exchanges between fibd and other protocol daemons.

capture interface <shm-interface-name> **direction** <dir>

Example

```
capture interface shm-0/0/1 direction both
```

4.3.4. ACL-based Packet Capturing

You can use an ACL to more granularly define the traffic to be captured.

capture acl <acl-name> **direction** <direction> **interface** <interface> <options>

Option	Description
<acl-name>	ACL name.
<direction>	Direction of the packet. The supported values are: `in`, `out`, or `both`.
<interface>	Specifies the interface that is used to capture packets onto console. For ACL-based packet capturing, the interface is mandatory.
file <filename> start	You can use this option to save the packets in the PCAP file and later use a tool like Wireshark to analyse the captured traffic
raw	Raw packet capture

Example

```
{
  "rtbrick-config:acl": {
    "l3v6": {
      "rule": [
        {
          "rule-name": "from_to_spine1",
          "ordinal": [
            {
              "ordinal-value": 10,
              "match": {
                "direction": "ingress",
                "source-ipv6-prefix": "fd3d:3d:100:a::1/128"
              },
              "action": {
                "capture": "true"
              }
            },
            {
              "ordinal-value": 20,
              "match": {
```

```
                "destination-ipv6-prefix": "fd3d:3d:100:a::1/128",
                "direction": "ingress"
              },
              "action": {
                "capture": "true"
              }
            }
          ]
        }
      ]
    }
  }
}

supervisor@rtbrick>LEAF01: op> capture acl from_to_spine1 direction both interface
hostif-0/0/3
Success : ifp capture started

2022-06-09T07:45:48.358898+0000 7a:2f:78:c0:00:03 > 7a:3f:3e:c0:00:03, ethertype IPv6
(0x86dd), length 122: (hlim 255, next-header ICMPv6 (58) payload length: 68)
fd3d:3d:100:a::1 > fd3d:3d:100:a::2: [icmp6 sum ok] ICMP6, echo request, seq 1

2022-06-09T07:45:48.359027+0000 7a:3f:3e:c0:00:03 > 7a:2f:78:c0:00:03, ethertype IPv6
(0x86dd), length 122: (hlim 64, next-header ICMPv6 (58) payload length: 68)
fd3d:3d:100:a::2 > fd3d:3d:100:a::1: [icmp6 sum ok] ICMP6, echo reply, seq 1

<...>
```

4.3.5. Filtering by Protocol

In most cases, while using the logical interface and physical interface, you may want to select a packet belonging to a specific protocol. In that case you can use the protocol filter option.

capture interface <interface-name> **direction** <direction> **protocol** <protocol-name>

Example

```
supervisor@rtbrick>LEAF01: op> capture interface ifp-0/0/52 direction both protocol
bgp

supervisor@rtbrick>LEAF01: op> capture interface ifl-0/0/52/1 direction both protocol
bgp
```

4.3.6. Raw Format

The raw option of the capture tool allows to decode as well as dump the packet in raw format. The **raw** option is useful if you want to examine packets in hex to check for malformed packets, etc.

capture interface <interface-name> **direction** <direction> **raw**

Example

```
supervisor@rtbrick>LEAF01: op> capture interface ifl-0/0/52/1 direction both raw

supervisor@rtbrick>LEAF01: op> capture interface ifp-0/0/52 direction both raw
```

4.3.7. PCAP File

While debugging a setup with real traffic, analysing all packets on a terminal might be cumbersome. You can use the **pcap** option to save the packets in the PCAP file and later use a tool like Wireshark to analyse the captured traffic.

To start capturing the traffic in a file, enter the following command:

capture interface <interface-name> **direction** <direction> **file** <file_name.pcap> **start**

To stop capturing the traffic in a file, enter the following command:

capture interface <interface-name> **direction** <direction> **file** <file_name.pcap> **stop**

Example

```
supervisor@rtbrick>LEAF01: op> capture interface ifp-0/0/52 direction both file
test.pcap start

supervisor@rtbrick>LEAF01: op> capture interface ifp-0/0/52 direction both file
test.pcap stop
```

5. Logging

5.1. Log Files

5.1.1. Log Files on the Host OS

On the host OS, i.e. RtBrick Host in case of hardware switches, navigate to the /var/log/ folder and list the available log files:

```
supervisor@spine1:/var/log$ ls -l
total 3064
<...>
-rw-r--r-- 1 root root    2242 Nov  4 11:13 rtbrick-apigwd.log
-rw-r--r-- 1 root root  458617 Nov  4 14:27 rtbrick-ctrld.log
-rw-r--r-- 1 root root     831 Nov  4 11:13 rtbrick-hostconfd.log
-rw-r--r-- 1 root root   73509 Nov  4 14:27 rtbrick-hostnetconfd.log
-rw-r--r-- 1 root root     668 Nov  4 11:13 rtbrick-lxcd.log
-rw-r----- 1 root adm   286356 Nov  4 14:27 syslog
<...>
```

Inspect the log file of interest using one of the standard Linux tools like cat, more, or less. For example:

```
supervisor@spine1:/var/log$ more rtbrick-ctrld.log
```

5.1.2. Log Files in the LXC

In the RBFS container, navigate to the /var/log/ folder and list the available log files. There will be one active log file per daemon or service, and up to ten compressed (.gz) log files created during log file rotation:

```
supervisor@spine1:/var/log$ ls -l
total 2376
<...>
-rw-r--r-- 1 root   root  48268 Nov  4 15:51 rtbrick-alertmanager-service-out.log
-rw-r--r-- 1 root   root   3451 Oct 30 17:51 rtbrick-alertmanager-service-out.log.1.gz
-rw-r--r-- 1 root   root   2509 Oct 25 00:02 rtbrick-alertmanager-service-out.log.2.gz
-rw-r--r-- 1 root   root      0 Nov  1 01:17 rtbrick-bgp.appd.1-service-out.log
-rw-r--r-- 1 root   root   3333 Oct 30 17:51 rtbrick-bgp.appd.1-service-out.log.1.gz
-rw-r--r-- 1 root   root   3192 Oct 19 13:17 rtbrick-bgp.appd.1-service-out.log.2.gz
<...>
```

The log files for brick daemons include only basic logs referring to the operation of the daemon itself. The actual applications like routing or service protocols use log tables described in the BDS Logging section. In contrast, Prometheus and

> Alertmanager are no BDs and use log files as the primary means of logging. Inspect the log file of interest using one of the standard Linux tools like cat, more, or less. For example:

```
supervisor@spine1:/var/log$ more rtbrick-prometheus-service-out.log
```

5.2. BDS Logging

5.2.1. Enabling BDS Logging

BDS logging is enabled per BD, per module, and per group by configuration. By default, BDS logging is enabled for all daemons and all modules with level Error. Verify the log status of the module and optionally per daemon. The following output reflects a default configuration:

```
supervisor@spine2: op> show log status module bgp bd bgp.iod.1
Module log status:
  bgp:
    bgp.iod.1:
      Level: error, Plugin: None
      Log group status:
        Group                    Level          Plugin                   Rate limit
        config                   error          None                     10
        general                  error          None                     10
        generic                  error          None                     10
        <...>
```

For troubleshooting an application, enable a more detailed log level. First example, enable and verify logging with level Info for the bgp.iod and all groups of the BGP module:

```
supervisor@spine2: cfg> set log bd bgp.iod.1 module bgp level info
supervisor@spine2: cfg> commit

supervisor@spine2: op> show log bgp.iod.1 status
<...>
supervisor@spine2: op> show log status module bgp bd bgp.iod.1
Module log status:
  bgp:
    bgp.iod.1:
      Level: info, Plugin: None
      Log group status:
        Group                    Level          Plugin                   Rate limit
        config                   info           None                     10
        general                  info           None                     10
        generic                  info           None                     10
        <...>
```

Second example, enable and verify logging with level Debug specifically for the PPP and PPPoE group of logs:

```
supervisor@leaf2: cfg> set log bd pppoed.1 module pppoed group ppp level debug
supervisor@leaf2: cfg> set log bd pppoed.1 module pppoed group pppoe level debug
supervisor@leaf2: cfg> commit
supervisor@leaf2: cfg>

supervisor@leaf2: op> show log status module pppoe
Module log status:
  pppoe:
    pppoed.1:
      Level: error, Plugin: None
      Log group status:
        Group                    Level          Plugin                    Rate limit
        config                   error          None                      10
        dhcpv6                   error          None                      10
        general                  error          None                      10
        generic                  error          None                      10
        ppp                      debug          None                      10
        pppoe                    debug          None                      10
        subscriber               error          None                      10
```

For a complete and detailed description of the logging configuration, please refer to the RBFS Logging Guide.

5.2.2. Inspecting Log Tables

BDS log tables are created on demand by the daemons if logging is enabled and there is an event to log. Use the 'show log table' command to look into the log tables:

```
supervisor@leaf2: op> show log table bgp.logs
[   Info   ] <2021-07-16T06:57:14.434358+0000> BGP peer fe80::7825:1dff:fe60:202, source fe80::7828:3bff:fe60:101,
hostname spine1, instance default reset, reason Notification received
[   Info   ] <2021-07-16T06:57:14.435583+0000> BGP FSM change, peer fe80::7825:1dff:fe60:202, source
fe80::7828:3bff:fe60:101, hostname -, instance default changed state from Established to Idle, reason Cease, Sub-Code:
Admin reset
[   Info   ] <2021-07-16T06:58:01.033211+0000> Created table(default.bgp.rib-
in.ipv6.unicast.fe80::7825:1dff:fe60:202.fe80::7828:3bff:fe60:101)
[   Info   ] <2021-07-16T06:58:01.033290+0000> Created table(default.bgp.rib-in.ipv6.labeled-
unicast.fe80::7825:1dff:fe60:202.fe80::7828:3bff:fe60:101)
[   Info   ] <2021-07-16T06:58:01.033347+0000> Created table(default.bgp.rib-in.ipv4.vpn-
unicast.fe80::7825:1dff:fe60:202.fe80::7828:3bff:fe60:101)
[   Info   ] <2021-07-16T06:58:01.033401+0000> Created table(default.bgp.rib-in.ipv6.vpn-
unicast.fe80::7825:1dff:fe60:202.fe80::7828:3bff:fe60:101)
[   Info   ] <2021-07-16T06:58:01.344927+0000> BGP FSM change, peer fe80::7825:1dff:fe60:202, source
fe80::7828:3bff:fe60:101, hostname spine1, instance default changed state from Idle to Established, reason None
[   Info   ] <2021-07-16T06:58:03.471937+0000> BGP message received from peer fe80::7825:1dff:fe60:202, source
fe80::7828:3bff:fe60:101, hostname spine1, instance default decode failed. Message type 2
<...>
```

The 'show log table' command supports various filter options. You can filter on the level, module, or

a regular expression. Example:

```
supervisor@spine2: op> show log table bgp.logs filter level error
supervisor@spine2: op>
```

For a complete and detailed description of the filter options, please refer to the RBFS Logging Guide.

6. Reporting Issues to RtBrick

If the described steps in the earlier sections do not provide enough information to resolve the issue, or if the collected data suggests that the system is not functioning as expected (for example, due to a suspected software bug), you can contact the Technical Assistance Center (TAC) at RtBrick for further support.

6.1. Opening a case

You can report issues by submitting a support ticket to RtBrick TAC team through Freshdesk. Contact with RtBrick must be initiated through a designated point of contact within your organization or team.

You must have an active business contract and a support account with RtBrick to open a support case.

6.1.1. Support Portal

To access RtBrick support portal:

Click Support Portal.

Or alternatively, visit the RtBrick website, in the **Support** drop-down menu, choose **Fix A Problem**. The Freshdesk login page appears.

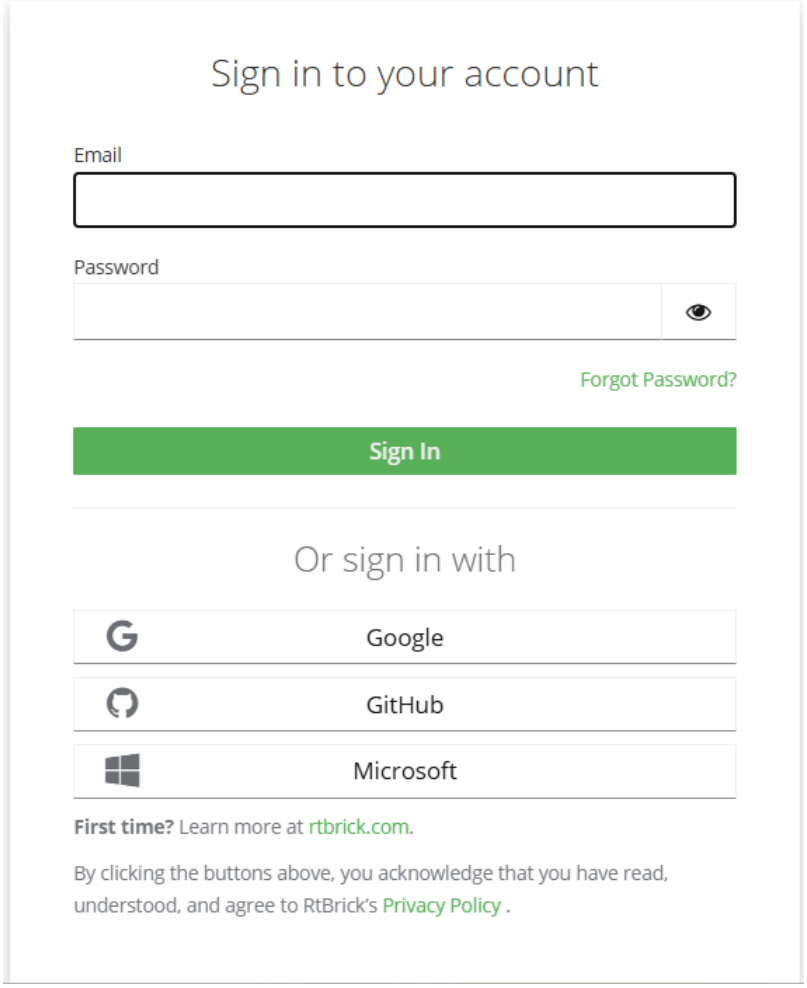

Log in to the support portal using your credentials.

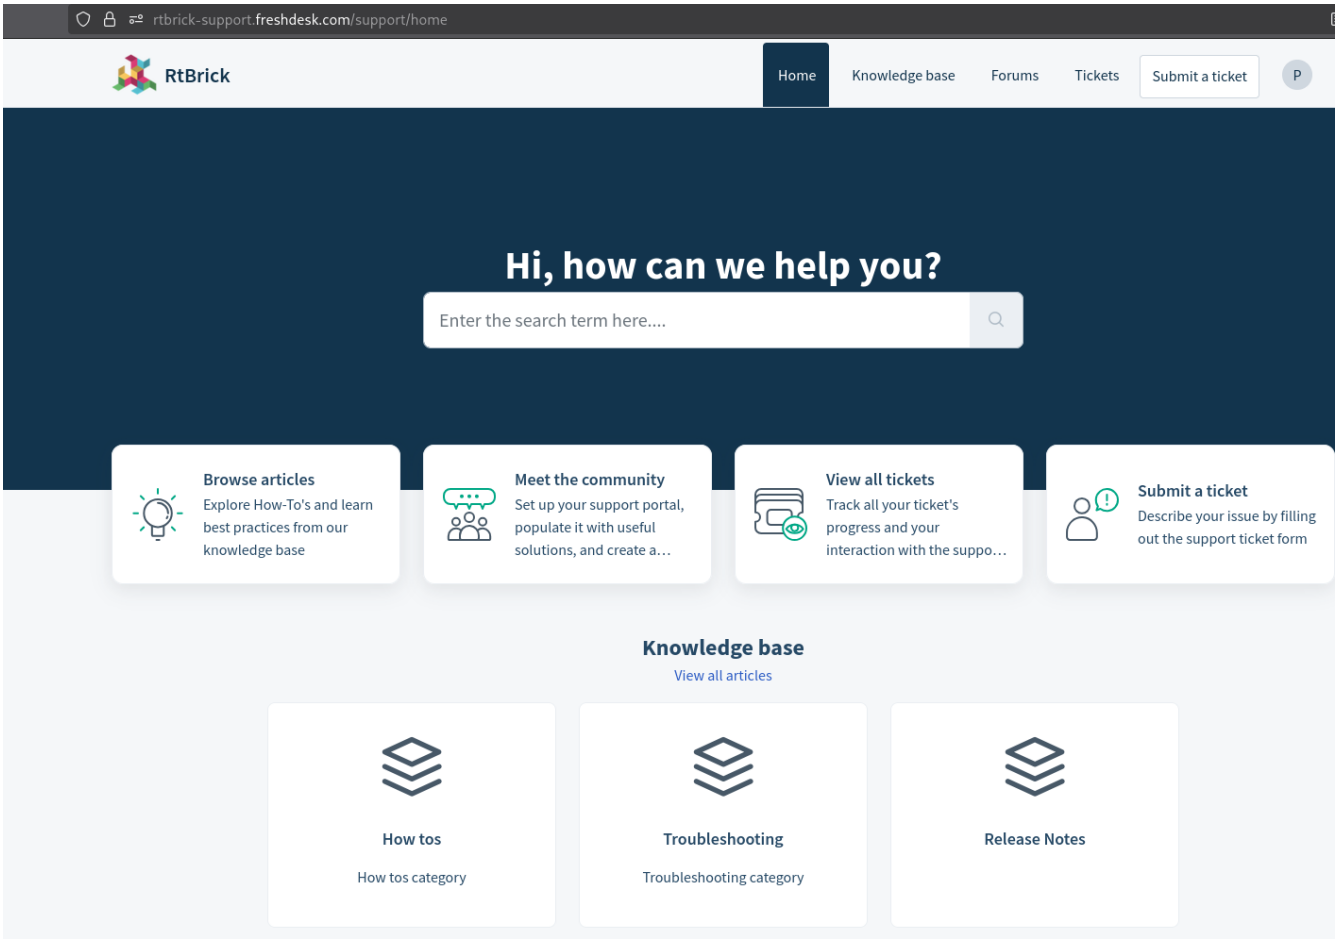

In the support page that appears, if you do not have any existing cases, you can view a form to open a case.

On the 'Home' page appears, click **Submit a ticket**. On the 'Submit a ticket' page, you must provide some information to pinpoint the issue encountered.

- If the issue was encountered on a virtual installation or on a physical box.
- The RBFS image role (spine/access leaf), the version, and the patch version.
- Any logs and/or comments: for logs you can use the "Add attachment" link in the support page, and comments can be posted after the case is submitted.

The fields marked with an asterisk are mandatory.

After filling in the fields, Click **Submit** at bottom of the page.

Now the Freshdesk ticket with an ID has been generated.

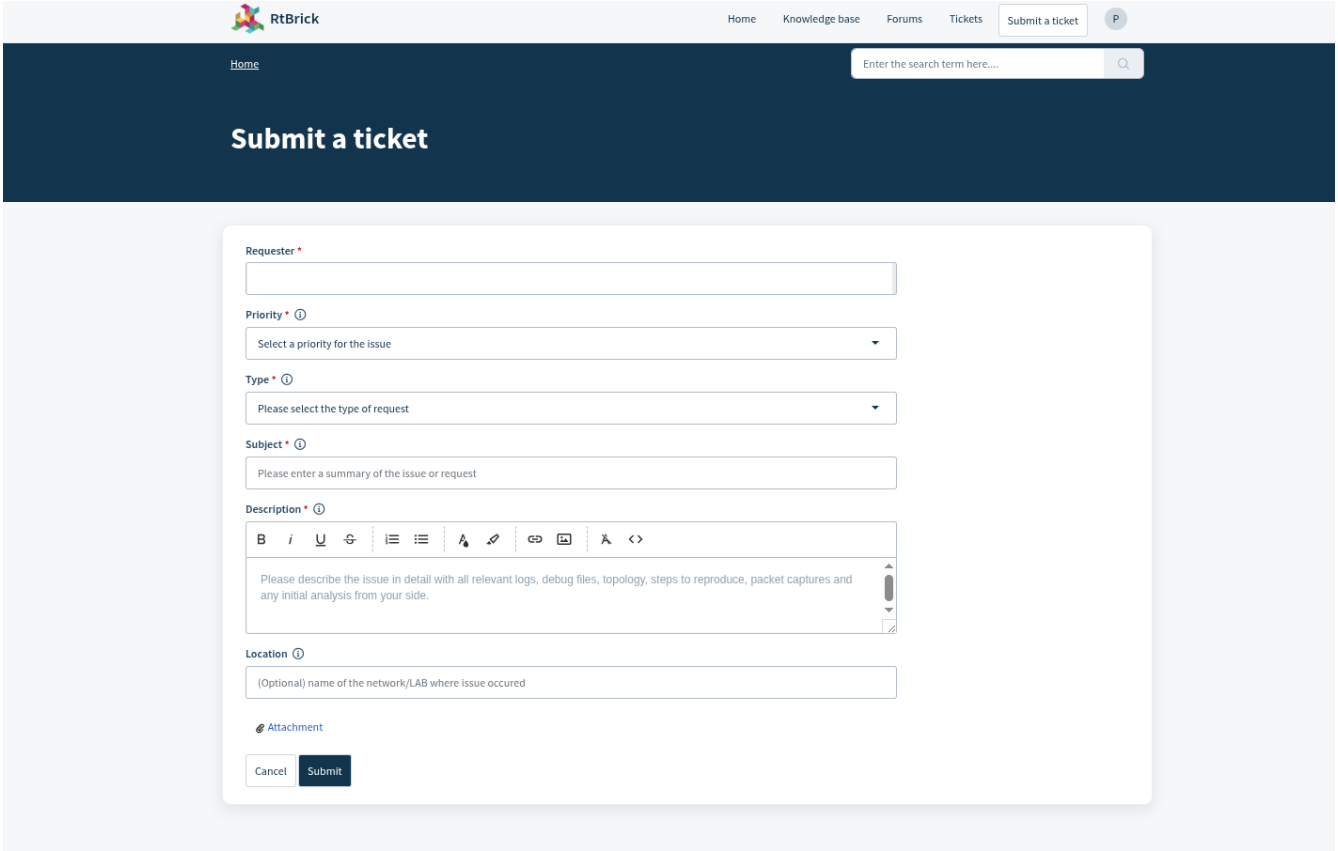

6.2. Debugger Information Utility Program

In RBFS, every daemon maintains a set of tables containing data specific to its functions. These daemon-specific tables help in a deeper analysis of issues, allowing for targeted debugging based on the specific functions and responsibilities of each daemon.

RBFS implements a debugger information utility program. This utility allows you to retrieve table information from all or a few specific modules. This information also includes log files, diagnostic messages, CPU and memory states, and current and previous configurations. This utility program can be run whenever an issue is encountered with RBFS and needs to be reported to customer support.

The utility program collects data and converts this into a JSON file format. Each collected file is named after the respective table name or data it contains and is stored in a directory named with the corresponding timestamp. This directory is compressed into a zip file and saved in the following directories:

- manual: /var/crash/debug_info/manual
- cron: /var/crash/debug_info/cron_job

You can then attach and send this zipped file to the RtBrick support team. This information is valuable for troubleshooting many types of network issues, as it allows the support team to analyze the router's state and configurations without directly accessing the router.

When users, who do not have the necessary permissions, attempt to access data from a table by executing the command, they will not be able to view the retrieved data.

6.2.1. How to Retrieve Data Using the Utility Program

To retrieve data, you can run the `collect debug-information` command in any of the modes: 'config', 'debug', 'operation'.

The debug-info utility supports collecting information based on features and grouped by daemons. You can gather debug data specific to features and make troubleshooting more targeted.

Syntax:

collect debug-information <option>

Attribute	Description
`all`	This option retrieves data from all daemons.
`all pd`	Collects the information only from VPP and BCM (150 seconds). Running the command temporarily disrupts the system; afterward, the system returns to normal operation.
`cron`	Starts cron job.
`daemon`	This option allows you to specify the daemon/module name so that the utility retrieves data only for that specific module/daemon.
`feature <arg>`	Name of the feature. Features include ACL, BGP, IFA, IFL, IFP, INBAND, IPOE, IS-IS, L2TP, L2X, LAG, NAT, OSPF, PPPoE, and QOS.
`exclude feature <arg_exclude>`	Retrieves information for all features, except the specified one.

To collect debug information for all modules, use the following command:

`collect debug-information all`

After executing the command, the data collection process takes a few seconds or minutes to complete.

TACACS users can collect the debug information by specifying the following option in the TACACS Server configuration.

`linux-group="debug_info,rtbrick_confd_sock_access`.

For more details see, *TACACS Server configuration* in the "Securing Control Plane Management Guide".

For local user it is mandatory to configure debug information collection using the following command:

```
set system user <username> role debug_info
```

The following example command execution shows the date and time in sequential order as each daemon's data is fetched. It also shows the total time taken to complete the collection process at the end

```
supervisor@rtbrick.net:/var/crash/debug_info $ cat debug_info.log
2024-09-09 09:46:09,099 - Executed Command collect debug-information all internal
2024-09-09 09:46:36,492 - Fetching contents for Module Name: bds-infra BDS tables
2024-09-09 09:46:38,541 - Fetching contents for Module Name: device-overview
2024-09-09 09:46:38,541 - Fetching contents for Module Name: ifmd
2024-09-09 09:46:38,541 - Fetching contents for Module Name: staticd
2024-09-09 09:46:51,247 - Fetching contents for Module Name: fibd
2024-09-09 09:46:51,247 - Fetching contents for Module Name: platform-dependent
2024-09-09 09:46:51,268 - Fetching contents for Module Name: mtu
2024-09-09 09:46:51,268 - Fetching contents for Module Name: ribd
2024-09-09 09:46:51,268 - Fetching contents for Module Name: pimd
2024-09-09 09:46:51,268 - Fetching contents for Module Name: mribd
2024-09-09 09:47:20,041 - Output directory: /var/crash/debug_info/manual/
debug_info_Sep-9-09-46-09-AM.tar.gz
2024-09-09 09:47:20,041 - Total Time Taken for executing collect debug-information all
internal command is : 70.944 seconds
```

Figure 1. Debug Information Collection Example

6.2.2. Periodic Data Collection

This utility program can also help in collecting system states and other information at scheduled intervals. This periodically collected information helps in understanding the system state before an issue occurs, which is useful in many scenarios.

The utility can be configured to automatically run at predefined intervals to collect data. After each run, it saves reports that can be used for further analysis and troubleshooting. You can define the intervals for periodic data collection to suit your needs.

The system employs Cron Job functionality to collect this periodic debugging information. A Cron Job is a scheduled task that runs automatically at specified intervals.

You can configure the Cron Job functionality to enable periodic data collection.\

6.2.3. Viewing Debug File Generation Status

You can run show commands to monitor the status of the debug file generation. The system provides real-time visibility into the progress of debug file generation.

Syntax:

show debug-files
show debug-files completed
show debug-files in-progress

The following table provides command options and descriptions.

Attribute	Description
`<cr>`	Without any option, it displays all debug files generated, including both completed and in-progress files.
`completed`	Displays only the debug files for which the debug file generation has completed.
`in-progress`	Displays only the debug files that are currently in progress.

Example outout for the show debug-files command.

```
supervisor@rtbrick.net: cfg> show debug-files
File count: 10
File Name                                          Status
debug_info_ospf_Jun-22-05-32-54-AM.tar.gz          Completed
debug_info_qos_Jun-22-05-34-17-AM.tar.gz           Completed
debug_info_lag_Jun-22-05-36-41-AM.tar.gz           Completed
debug_info_lldpd_Jun-22-05-39-20-AM.tar.gz         Completed
debug_info_ipoe_Jun-22-05-41-10-AM.tar.gz          Completed
debug_info_l2x_Jun-22-05-43-29-AM.tar.gz           Completed
debug_info_all_Jun-22-05-44-25-AM.tar.gz           Completed
debug_info_all_Jun-22-05-49-19-AM.tar.gz           Completed
debug_info_all_Jun-22-05-51-11-AM.tar.gz           Completed
debug_info_subscriberd_Jun-22-05-56-18-AM.tar.gz   Completed
```

Setting Up Cron Job

You can specify the data collection interval, limit the number of files, and initiate the Cron job function.

Specify the Interval:

Define how frequently the system should collect debug information. The interval is specified in hours. The default interval for running the utility is 12 hours. Use the command:

`set debug-information collector interval <interval>`

Attribute	Description
`interval`	Specifies the interval (in hours) for running the Debug Information (DUI) cron job. Range: 2 – 168 hours.

Specify the File Limit:

Specify the maximum number of files to be stored for such runs. Once the limit is reached, the system will start overwriting the oldest files and this process continues. The default maximum number of files is 10. Use the command:

`set debug-information collector max-files <max_files>`

Attribute	Description
`<max_files>`	Specifies the maximum number of Debug Information (DUI) files that the cron job can retain. Range: 1 – 50.

Stopping the Cron Job Function

You can use the following delete form of the command to halt the ongoing Cron Job process.

```
delete debug-information collector
```

Registered Address	Support	Sales
40268, Dolerita Avenue Fremont CA 94539		
+1-650-351-2251		+91 80 4850 5445
http://www.rtbrick.com	support@rtbrick.com	sales@rtbrick.com

©Copyright 2024 RtBrick, Inc. All rights reserved. The information contained herein is subject to change without notice. The trademarks, logos and service marks ("Marks") displayed in this documentation are the property of RtBrick in the United States and other countries. Use of the Marks are subject to RtBrick's Term of Use Policy, available at https://www.rtbrick.com/privacy. Use of marks belonging to other parties is for informational purposes only.